AiBase Color Active Deterrence Setup Manual

Table of Contents

(Click on the part you want to read to get there directly)

Part 1: How to setup PID & LCD using NVR

Part 2: How to setup strobe light for PID

Part 3: How to setup siren for PID

Part 4: How to disarm cameras via NVR & APP

Part 5: How to manage APP push notifications

Part 6: How to manually turn on strobe light & siren through APP


Part 7: How to manage APP alarm push schedule

**There is a" Return to Menu "icon on the top right corner of each page, click on it to return to this menu


Return to Menu

Part 1: How to set up Perimeter Intrusion Detection (PID) & Line Crossing Detection (LCD)


Step 1: Go to "Setup" under "AI"

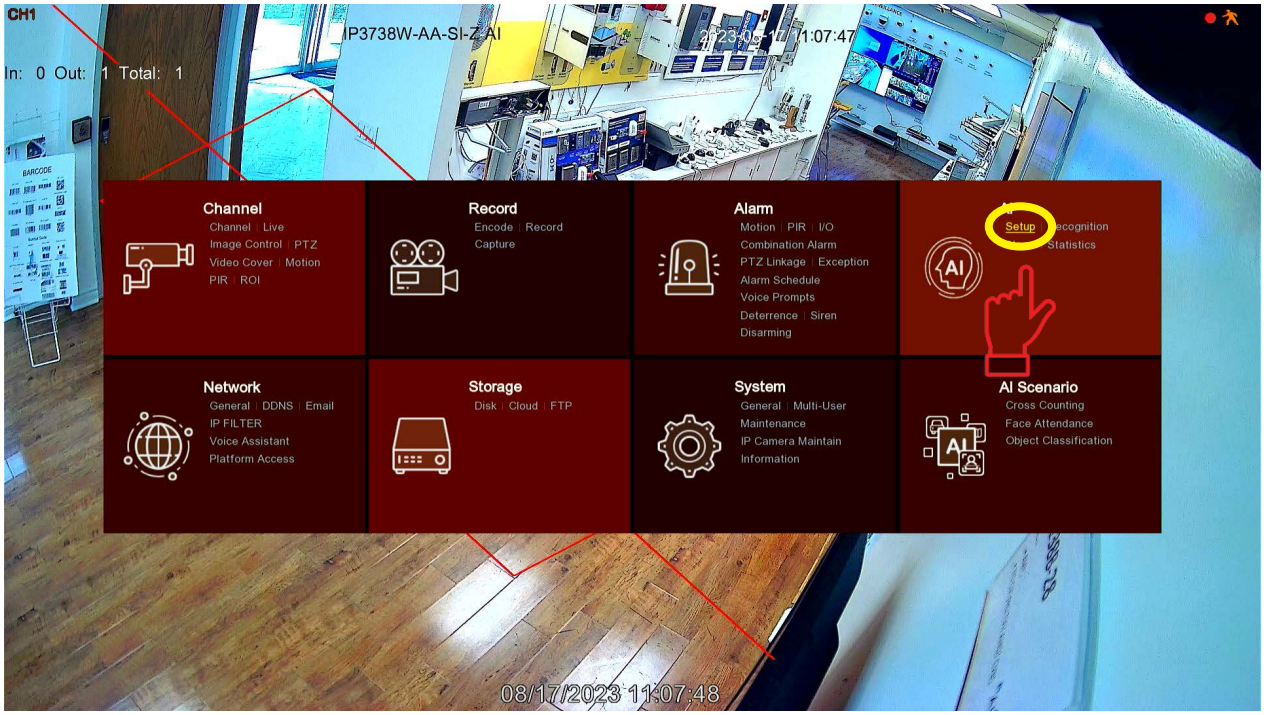

Step 2: Go to "Schedule"

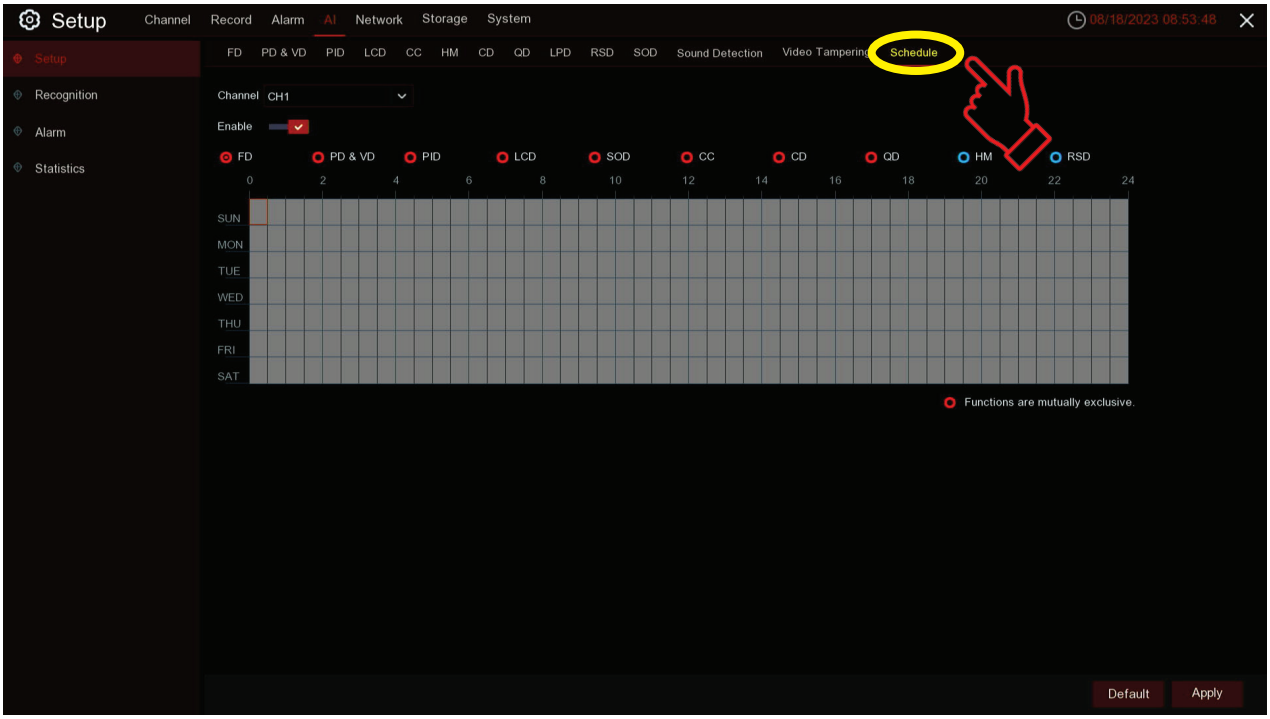


Step 3: Select the camera channel you need

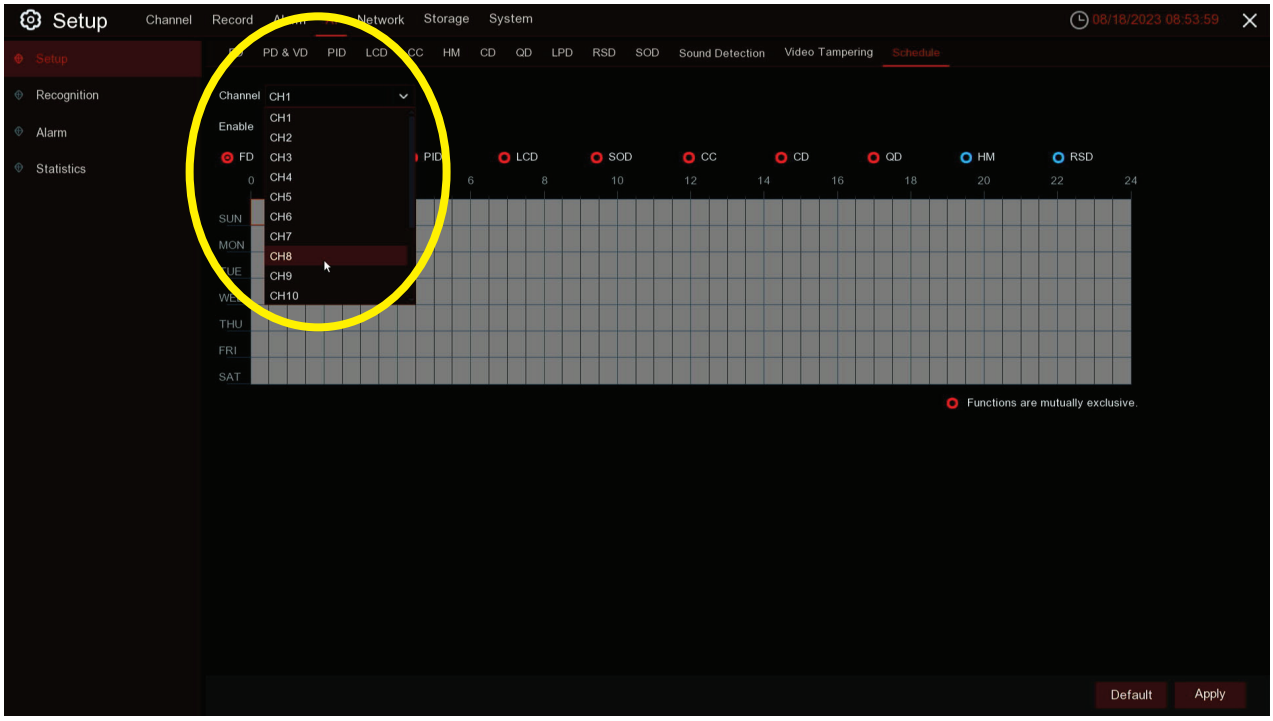


For Perimeter Intrusion Detection (PID)


Step 4: Select “PID” and enable all the time periods, click “Apply”

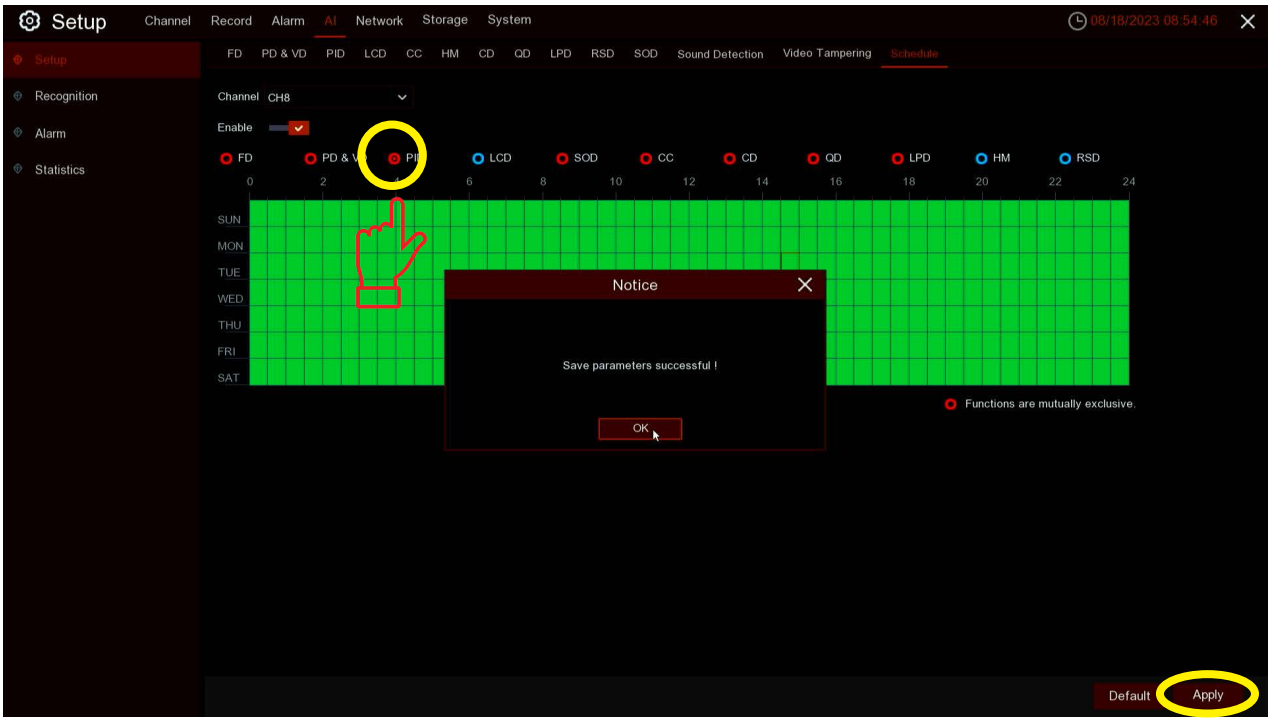

Step 5: Select “PID” and click the icon to manage settings

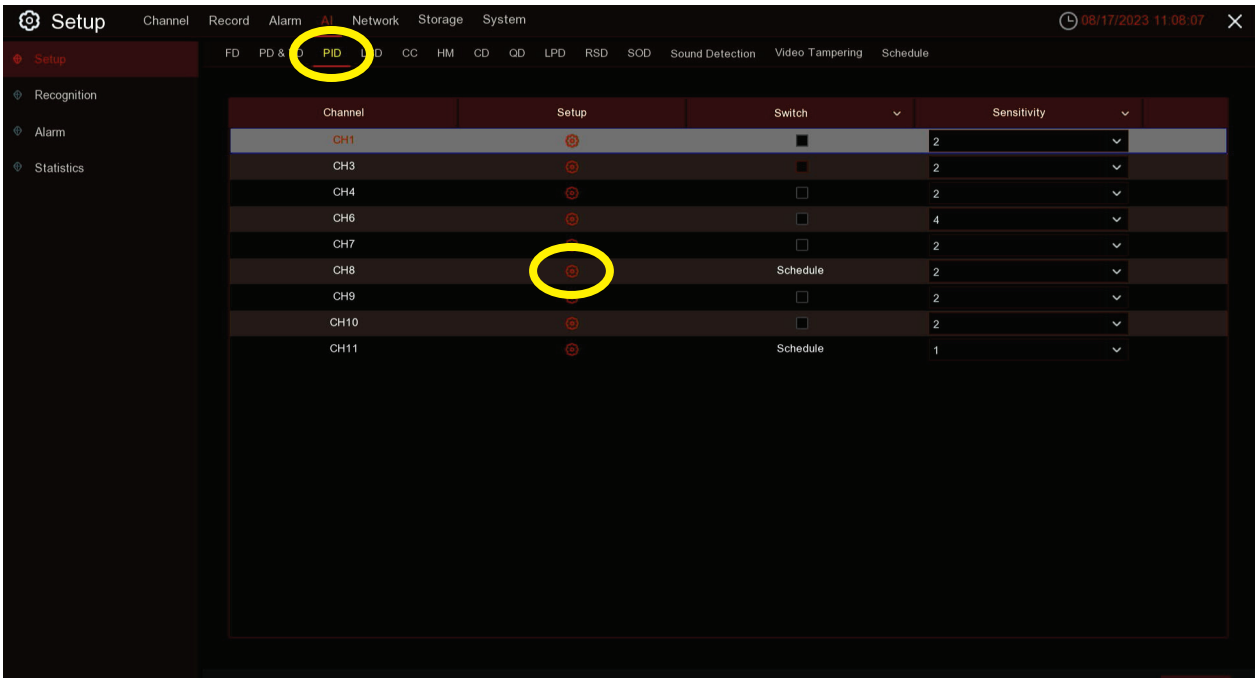


Step 6: Select “Rule Number” to create a detection zone

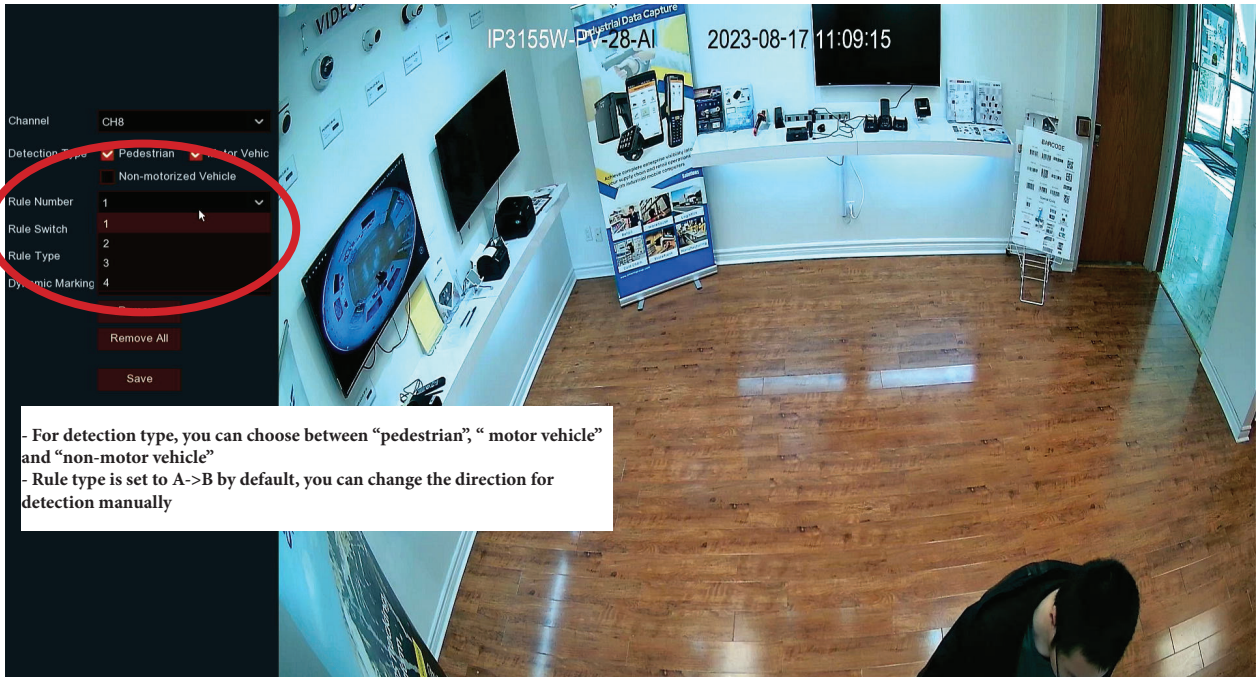


Step 7: Click and drag your mouse across the screen to setup a detection zone, don't forget to turn on the "Rule Switch"



Step 8: You can draw 4 detection zones via 4 Rule Number

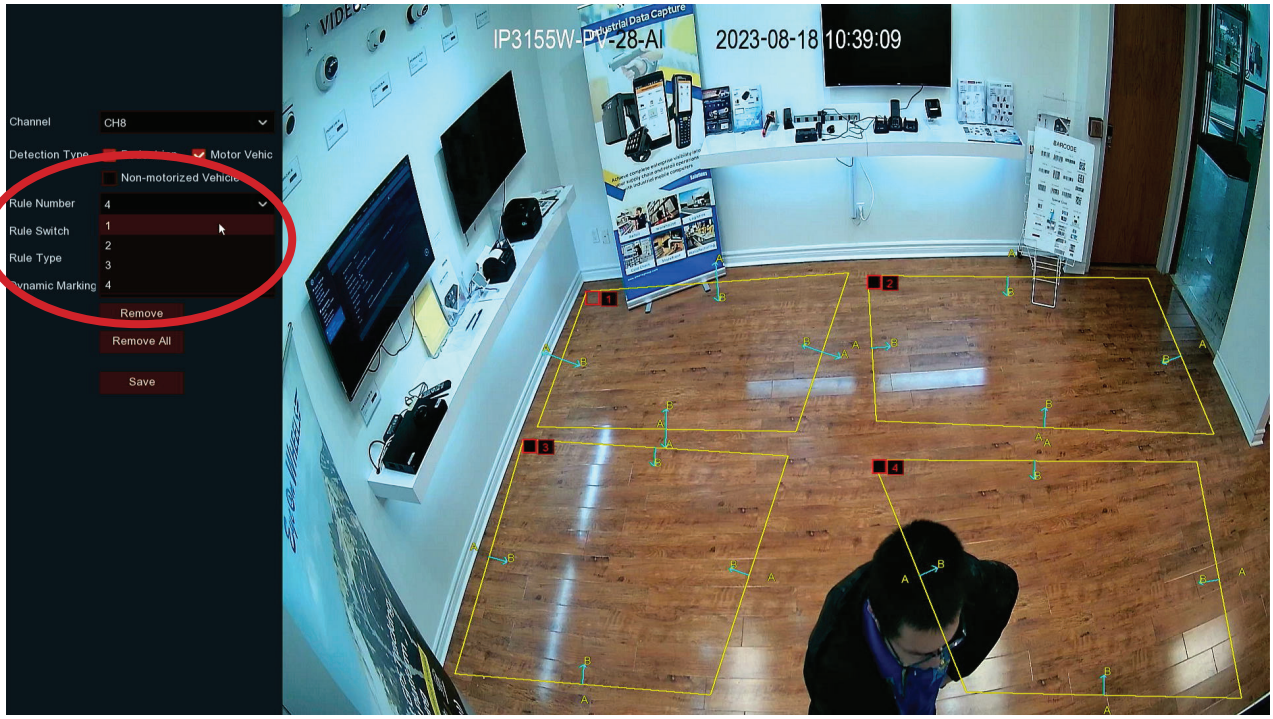


Final Step: “Save” your settings

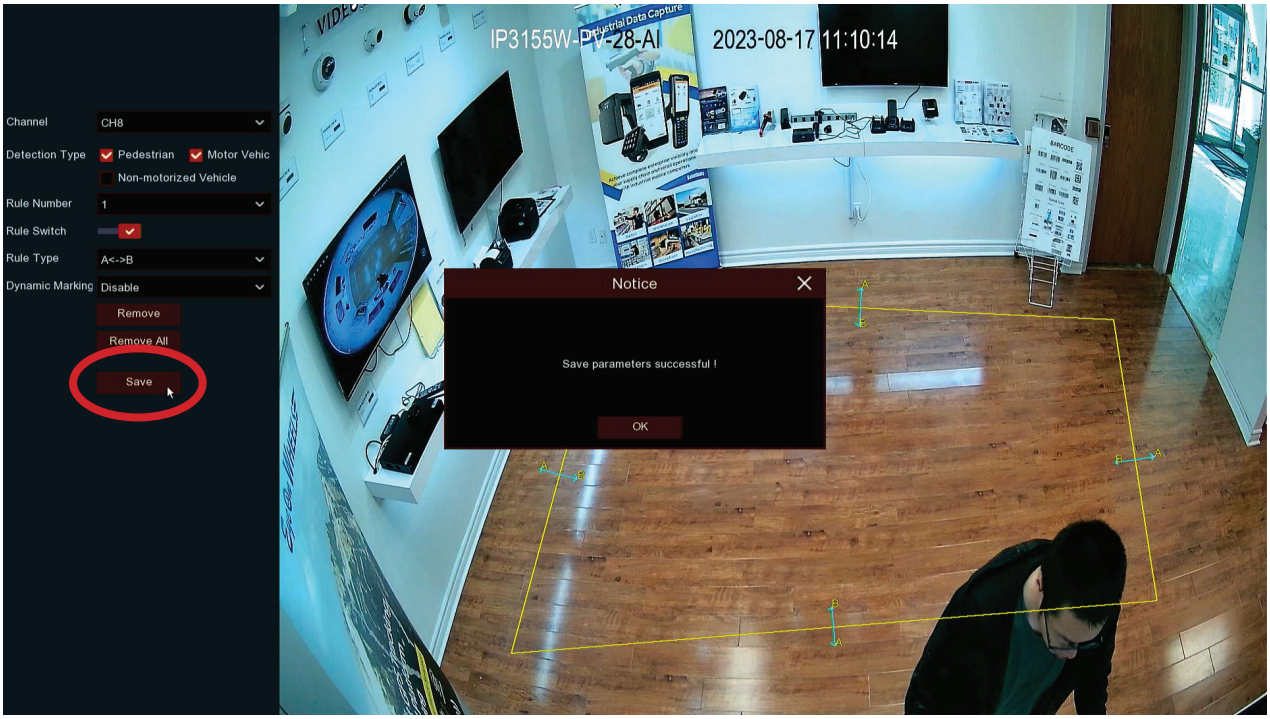


For Line Crossing Detection (LCD), *following Step 3*


Step 4: Select “LCD” and enable all the time periods, click “Apply”

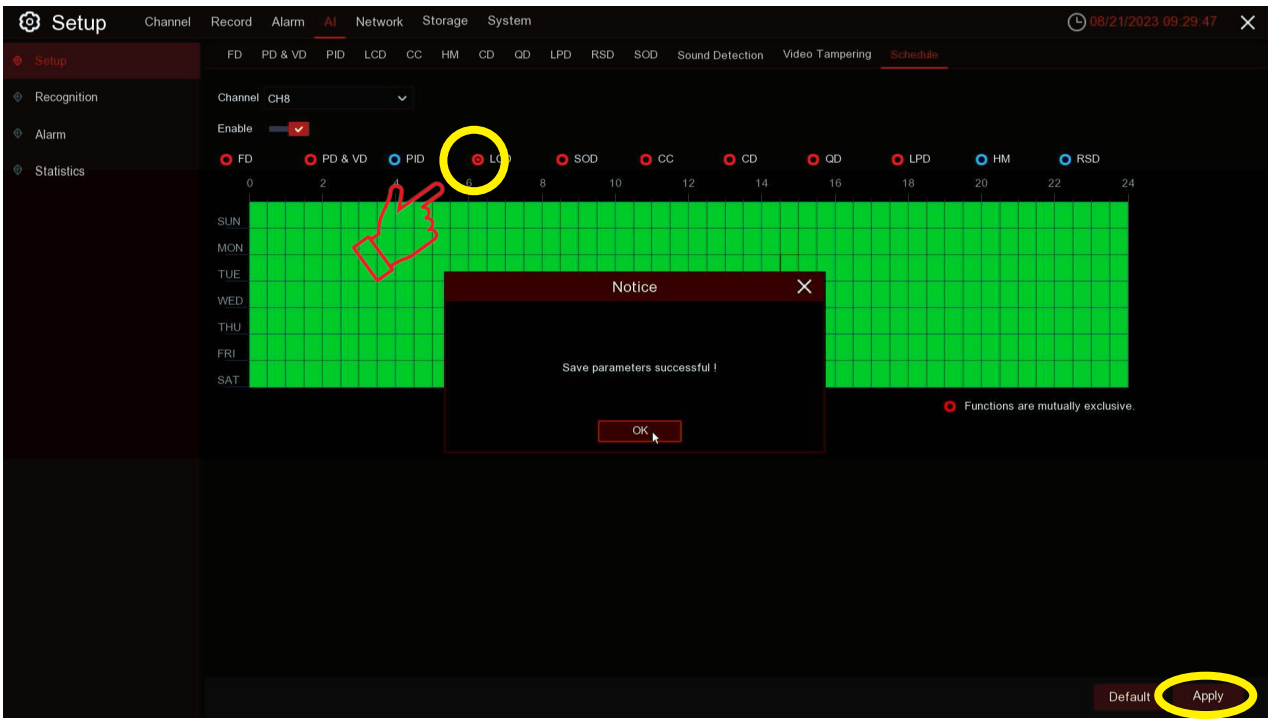


Step 5: Select “LCD” and click the icon to manage settings

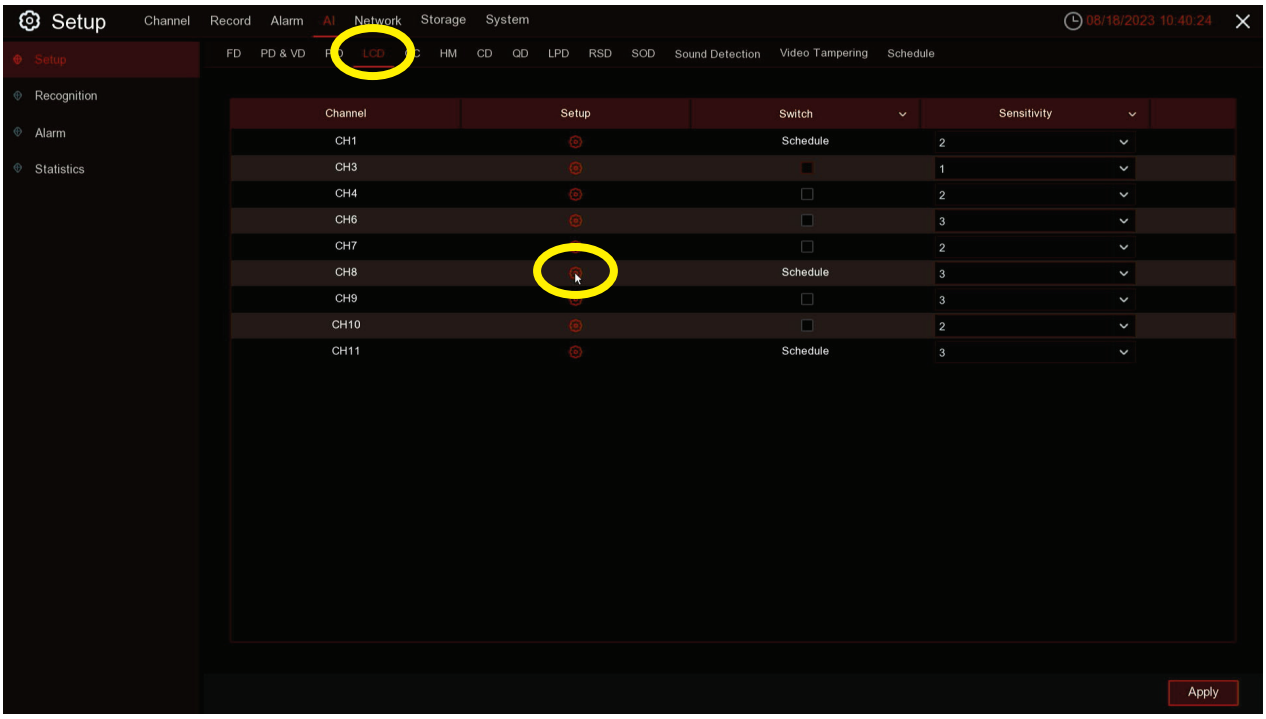


Step 6: Select “Rule Number” to create tripwire

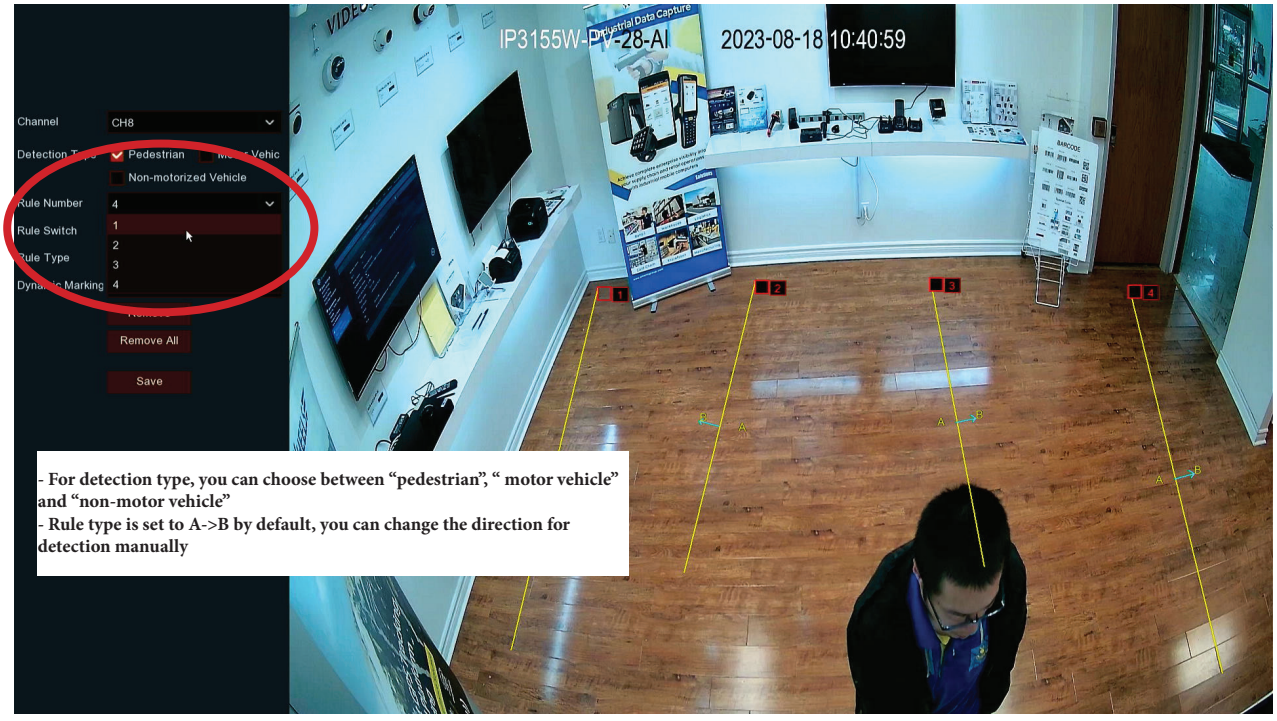

Step 7: You can draw 4 tripwires via 4 Rule Number

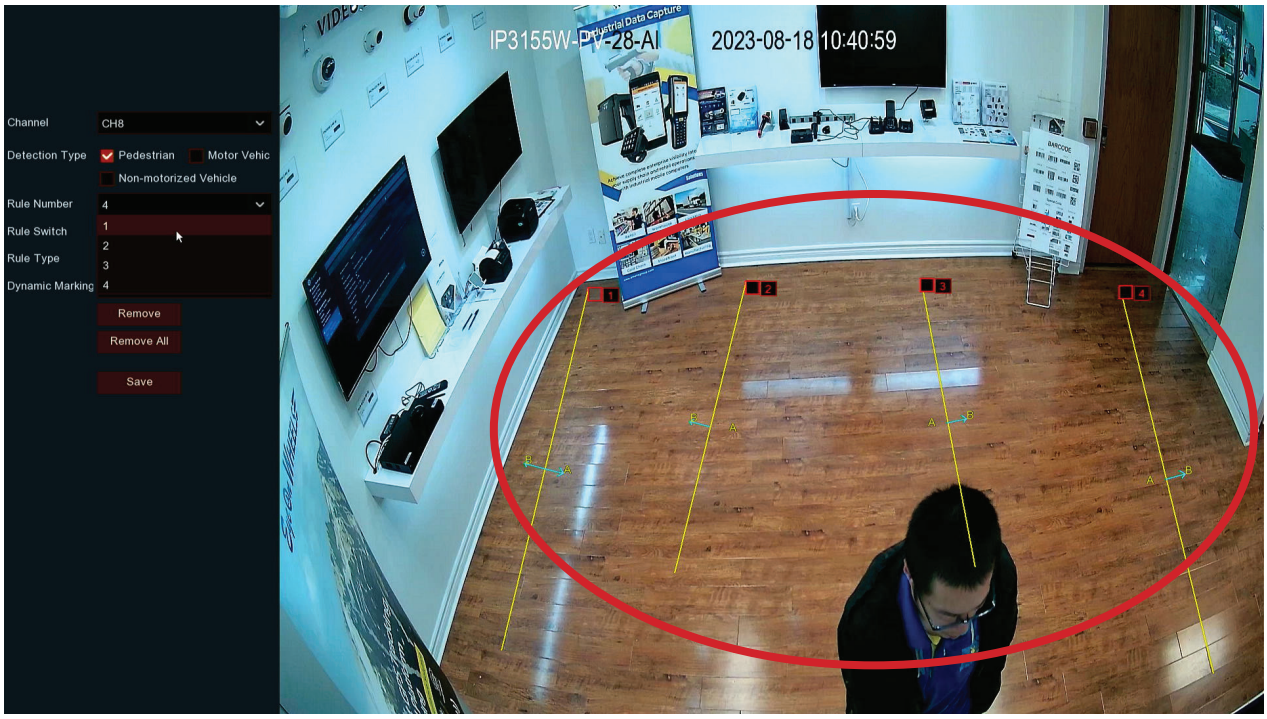


Final Step: Enable the rule switch and "Save" your settings

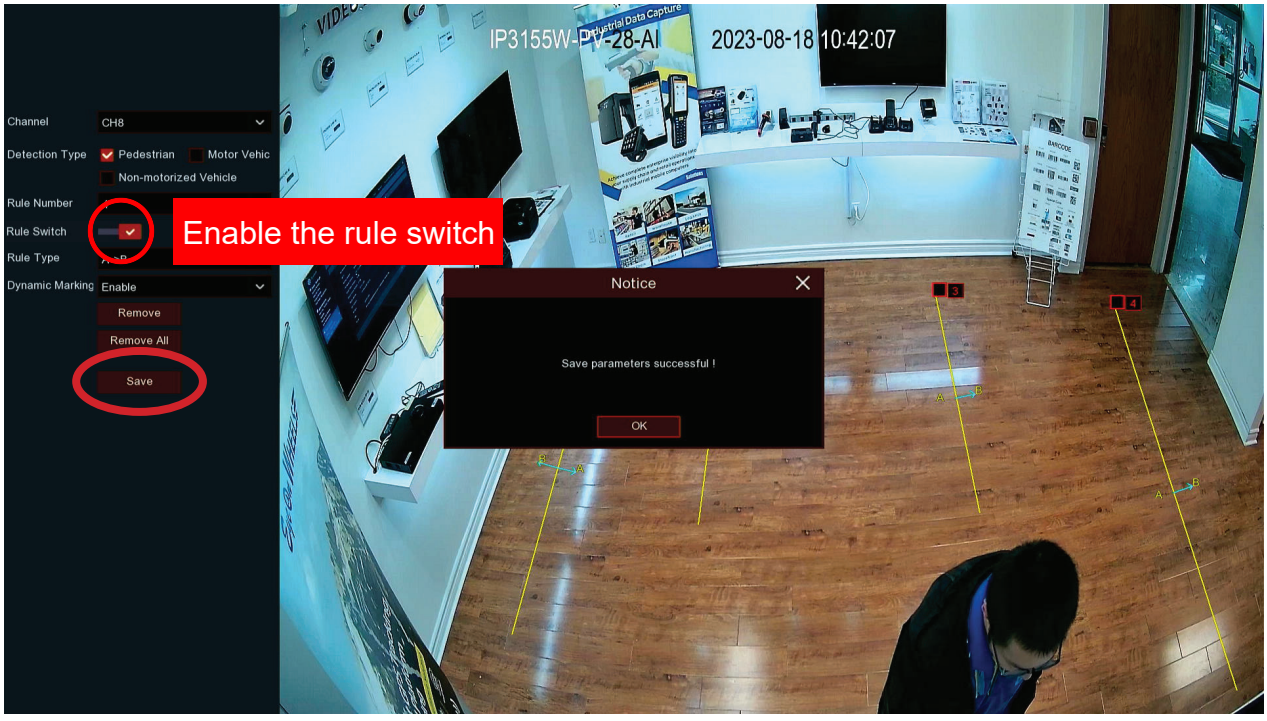


Return to Menu

Part 2: How to set up camera strobe light for PID (refer to this part for LCD strobe light setup)


Step 1: Go to "Alarm" (still under "Setup") and select "Deterrence"

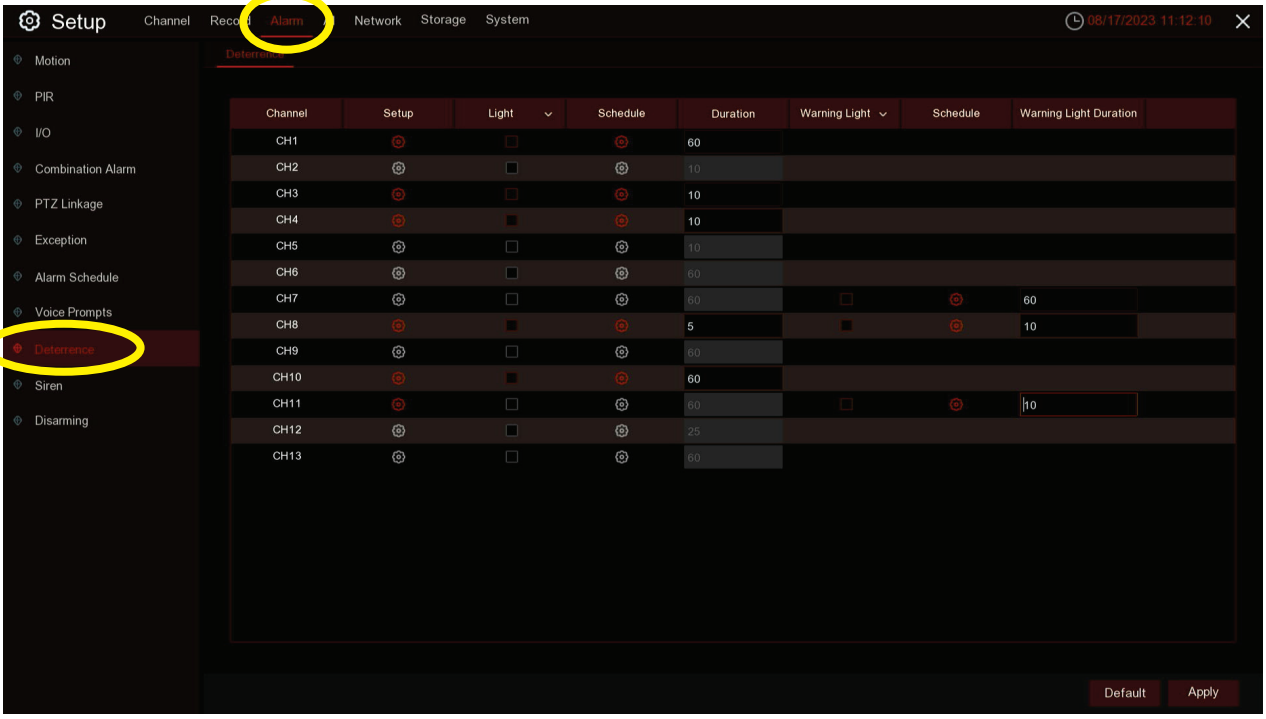


Step 2: Click the icon to set strobe light schedule

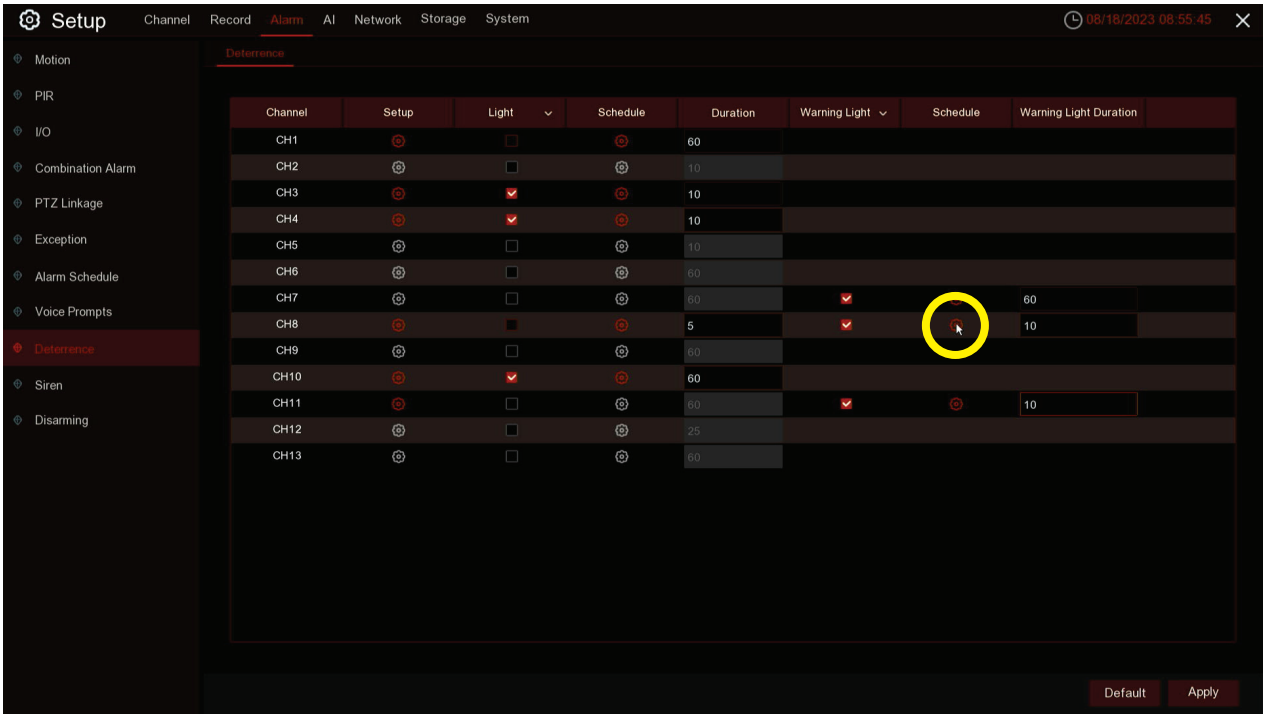


Step 3: Go to “PID” and turn on “PID Warning Light Switch”

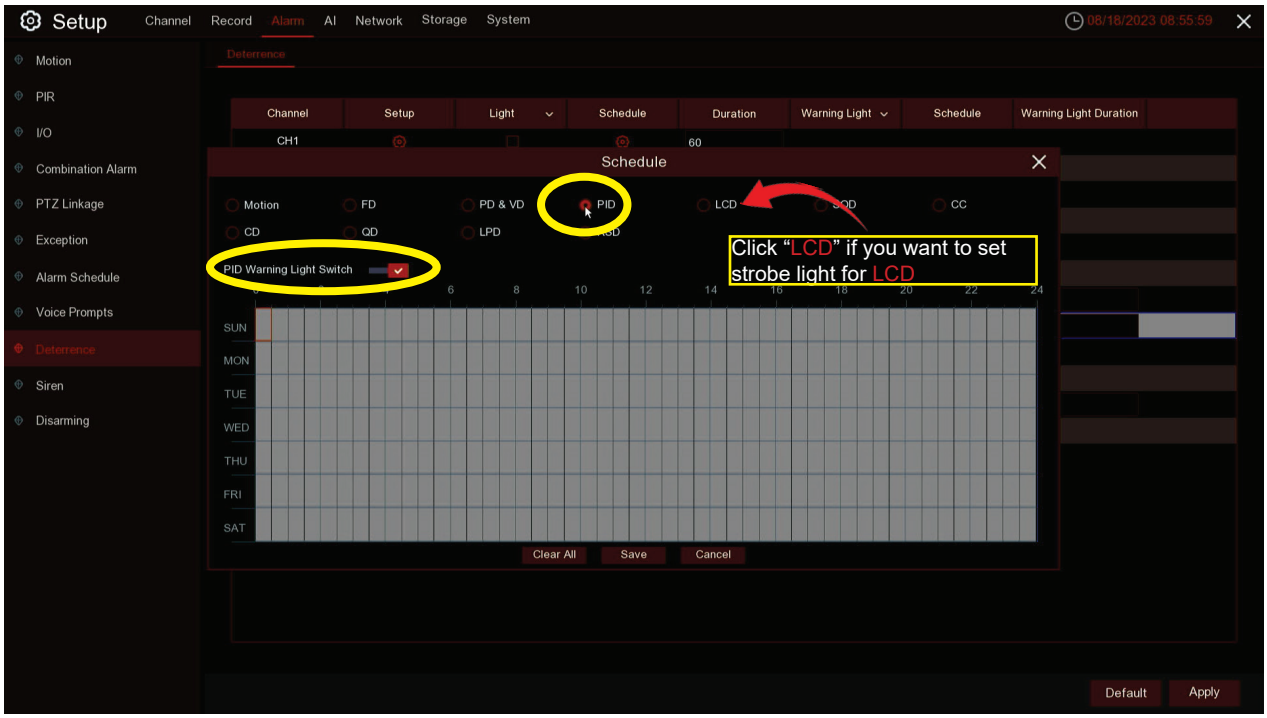

Step 4: Enable the time periods of your choice, click “Save”, then “Apply”

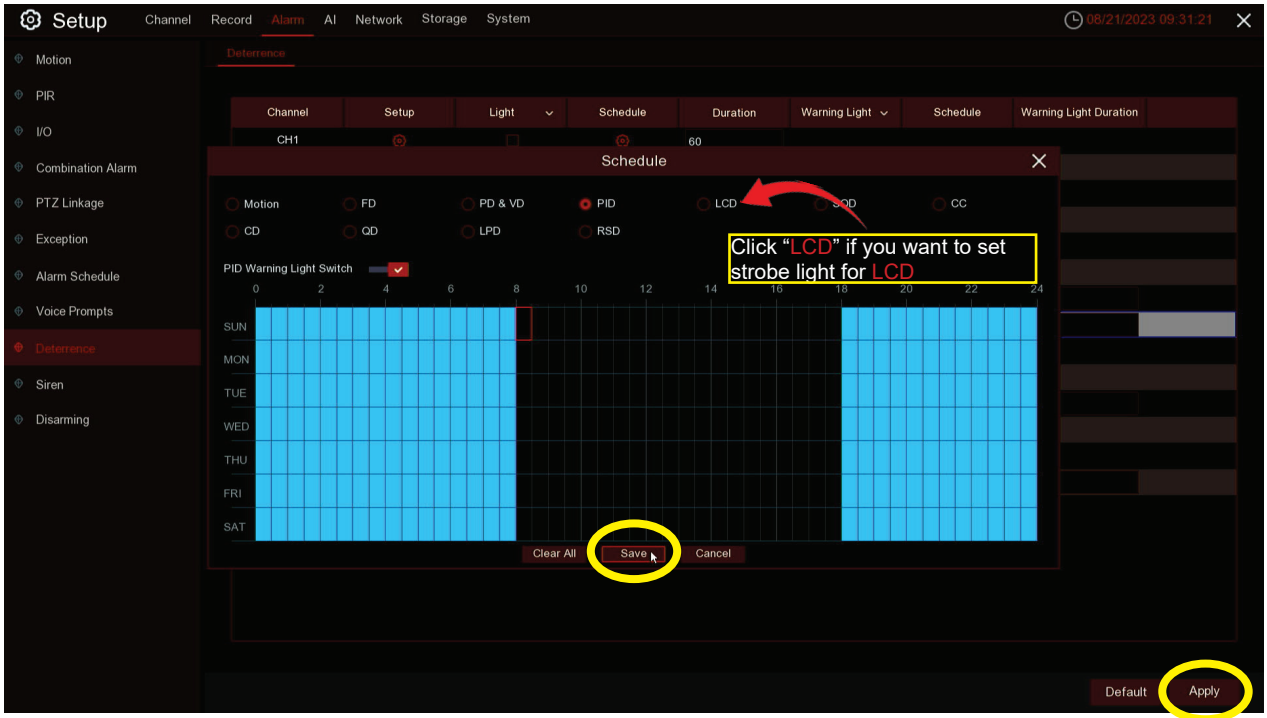

Step 5: Click the icon to enter camera Setup

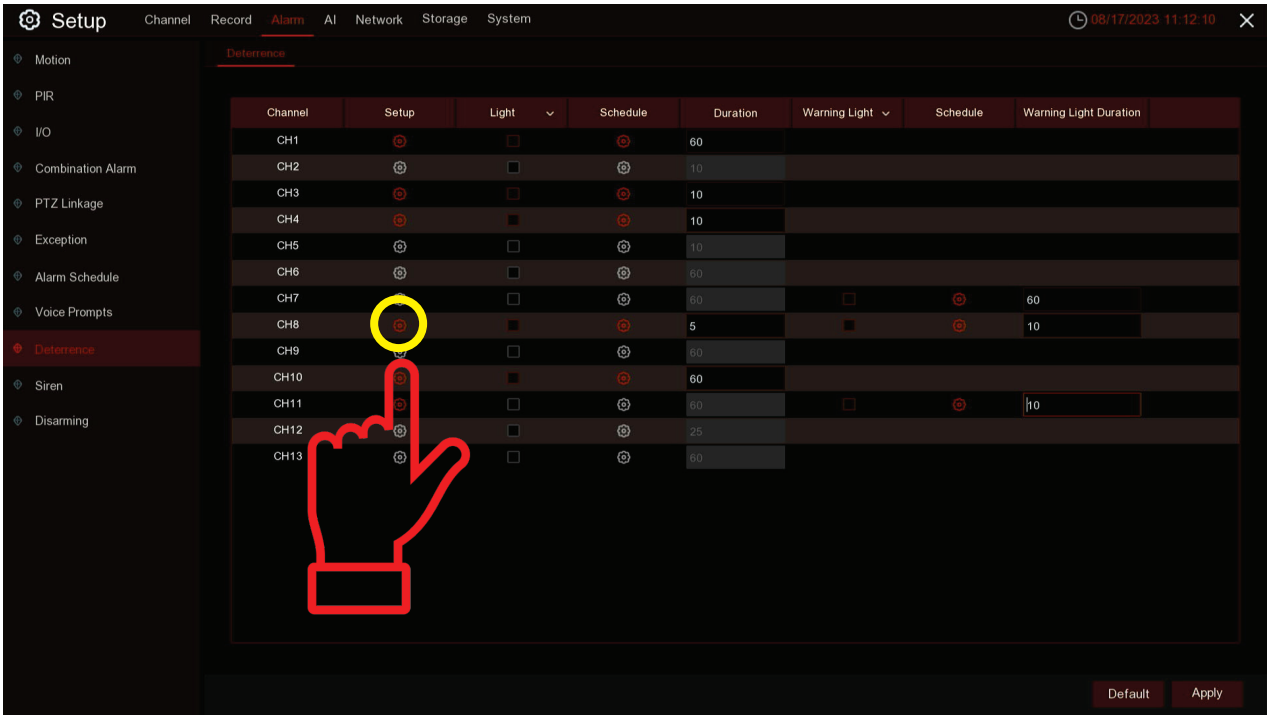


Final Step: Select “Enable” for Warning Light




Part 3: How to set up Siren for PID (refer to this part for LCD Siren setup)


Step 1: Go to "Siren" (below Deterrence) to choose a "Channel" and turn on Enable

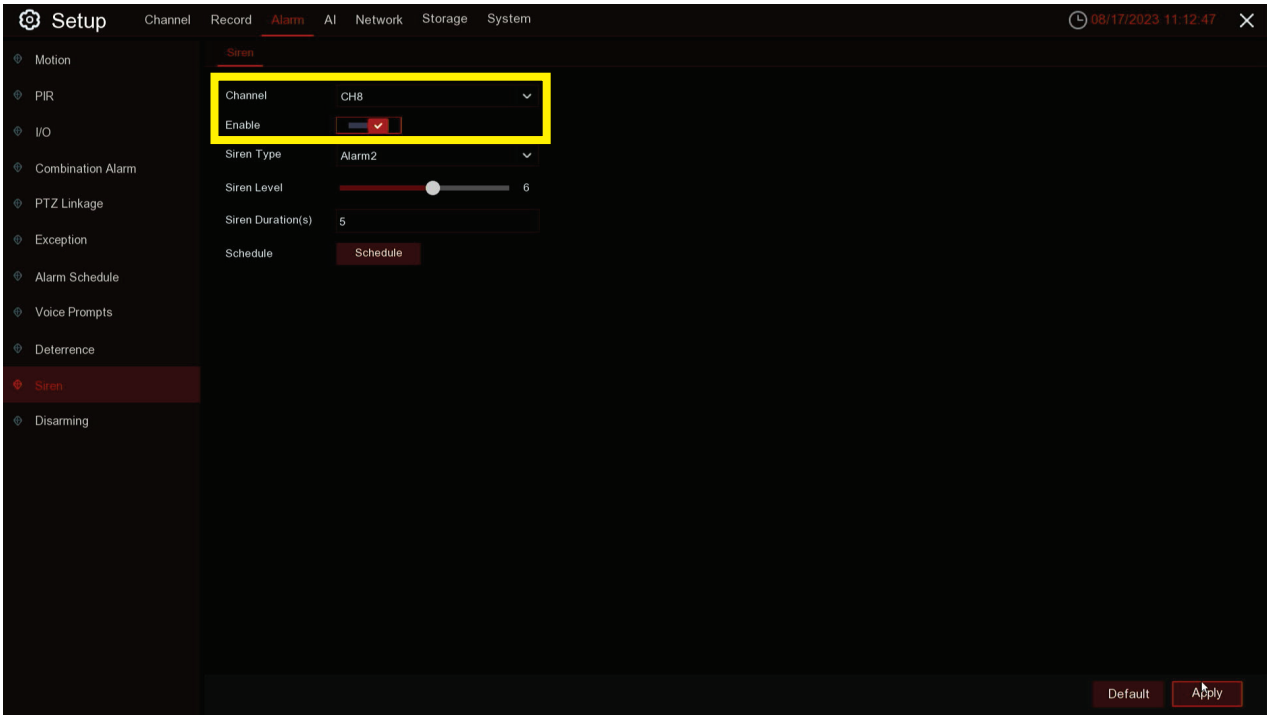


Step 2: Click "Schedule" to set camera siren schedule

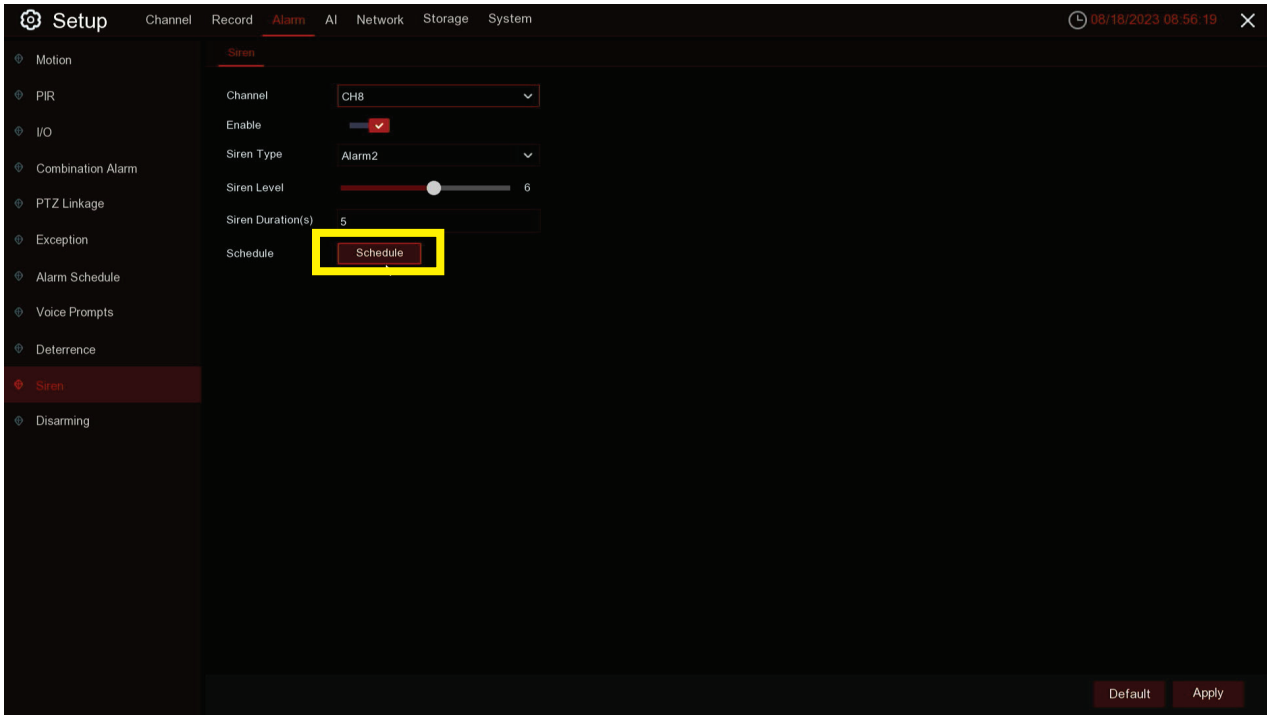

Step 3: Go to “PID” and turn on “PID Siren Switch”

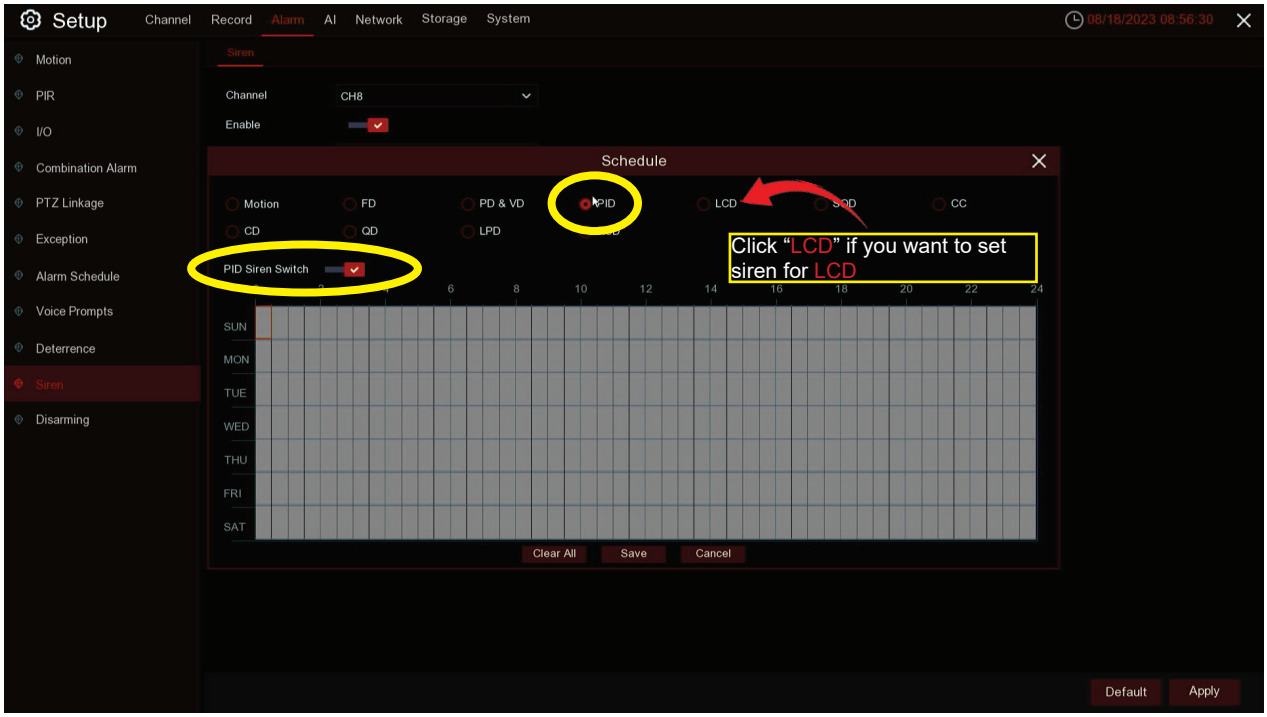


Final Step: Enable the time periods of your choice, click “Save”, then “Apply”

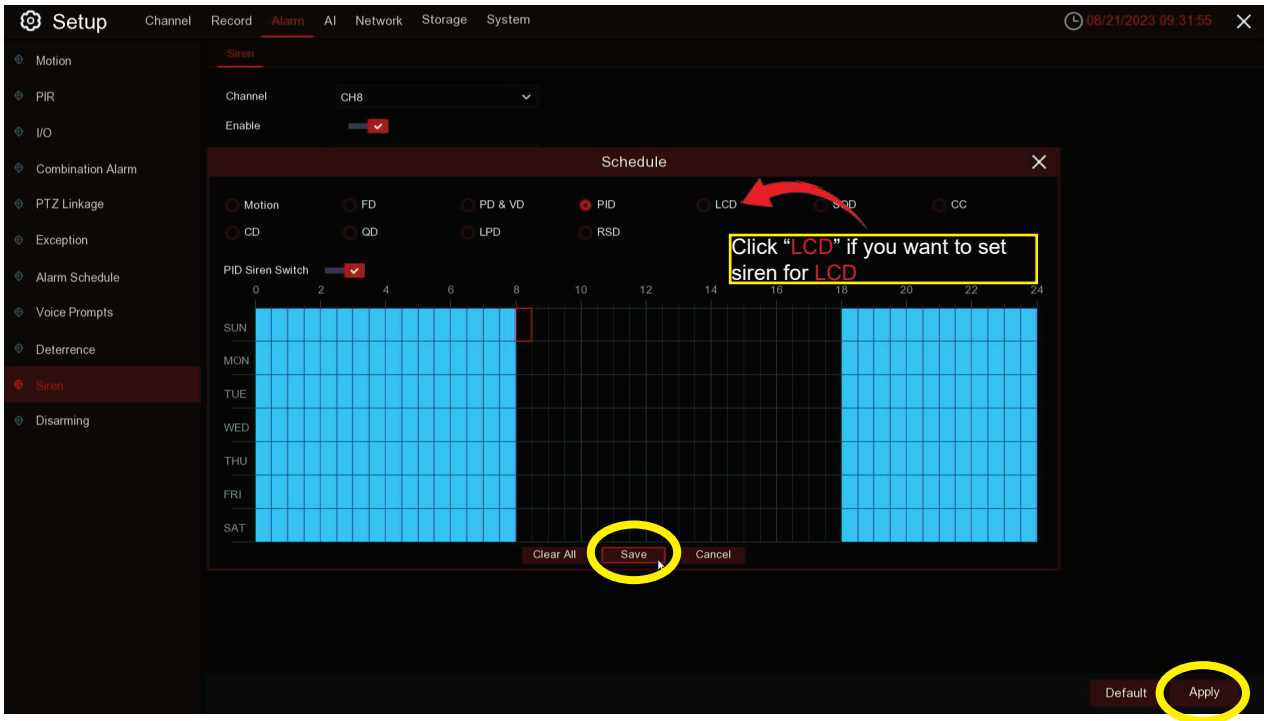


Part 4: How to disarm a camera via NVR & APP

For NVR


Step 1: Go to “Disarming” (below “Siren”)

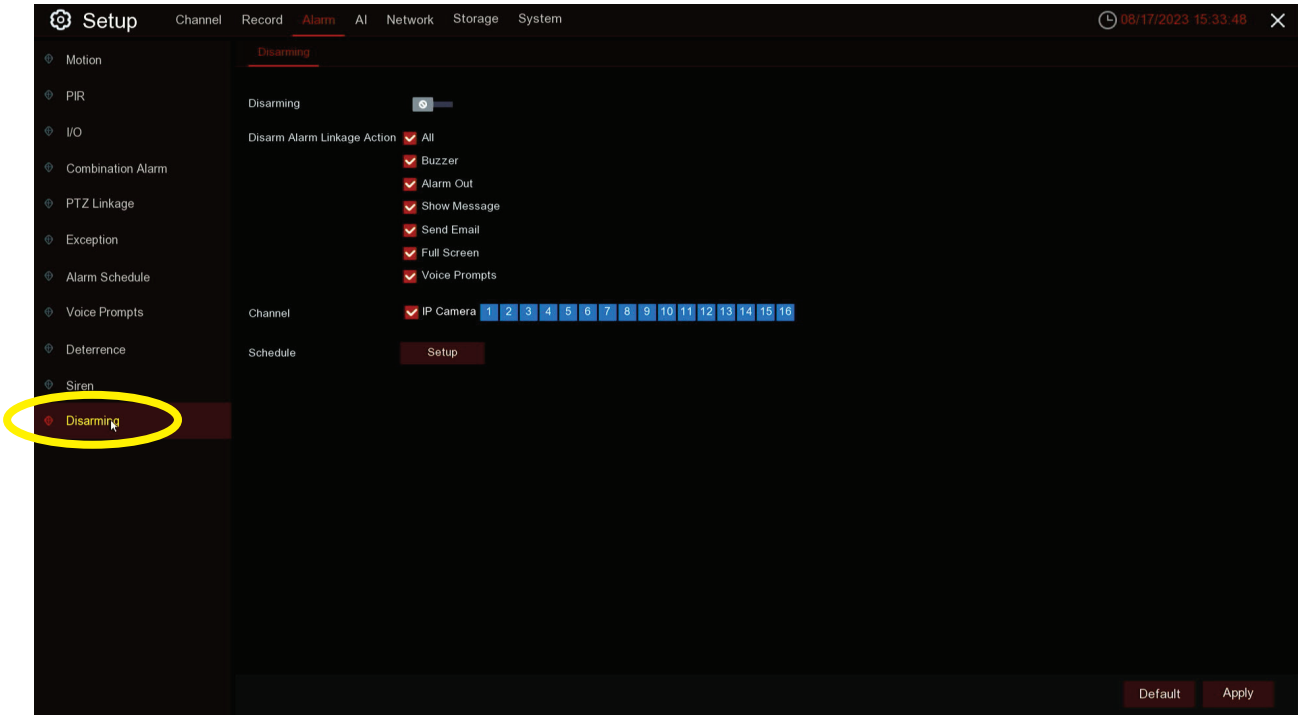


Step 2: Select camera channels you want for disarming

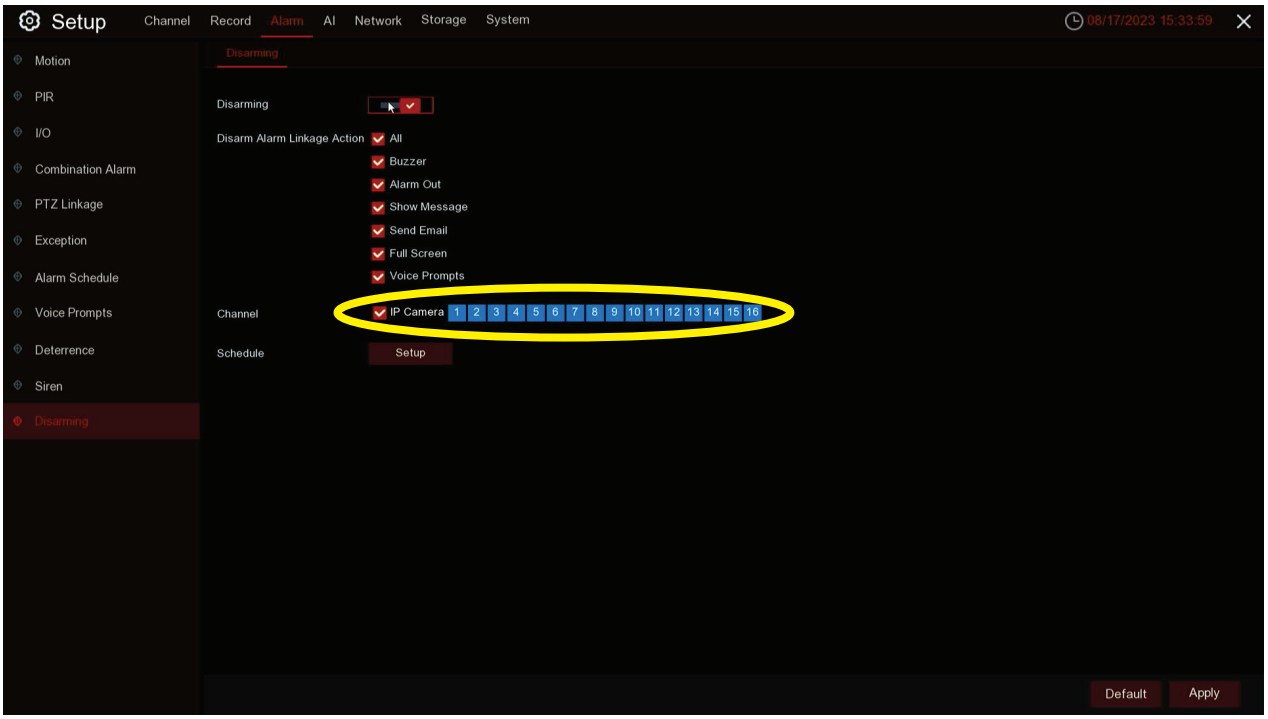

Step 3: Turn on "Disarming" to manually turn off camera siren & strobe light for ALL cameras selected

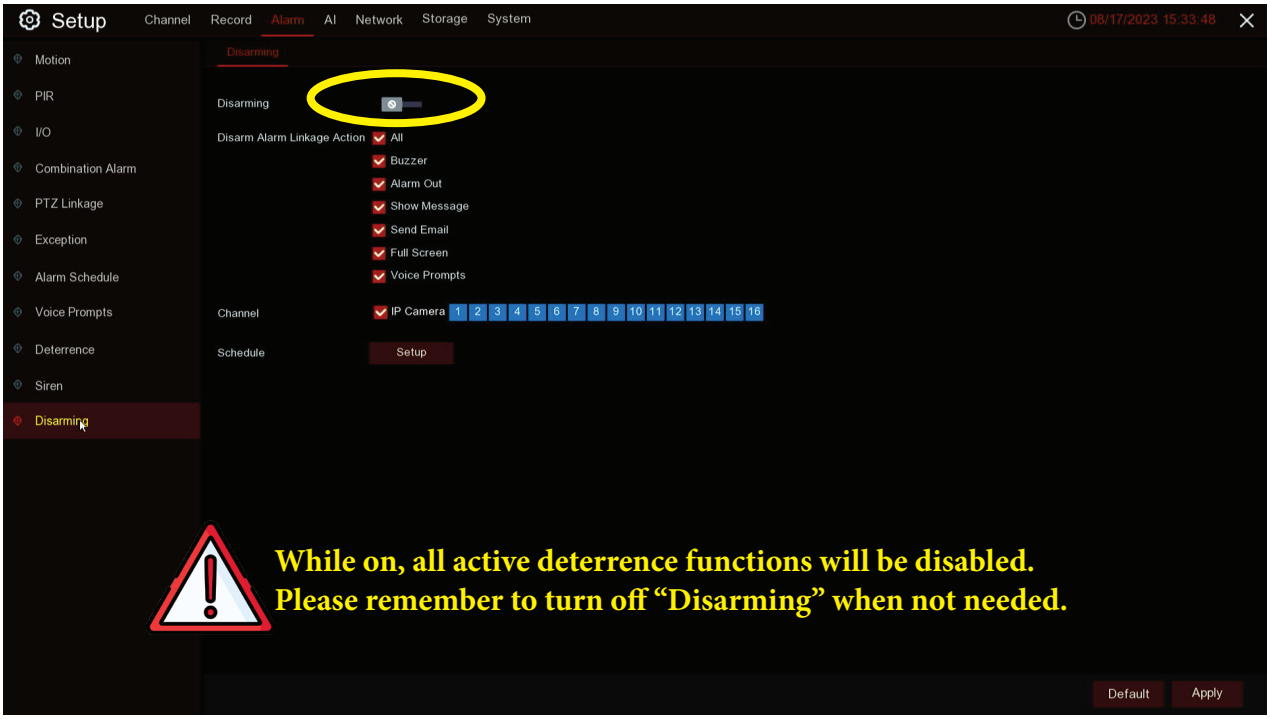


Final Step: Click "Apply" to save settings

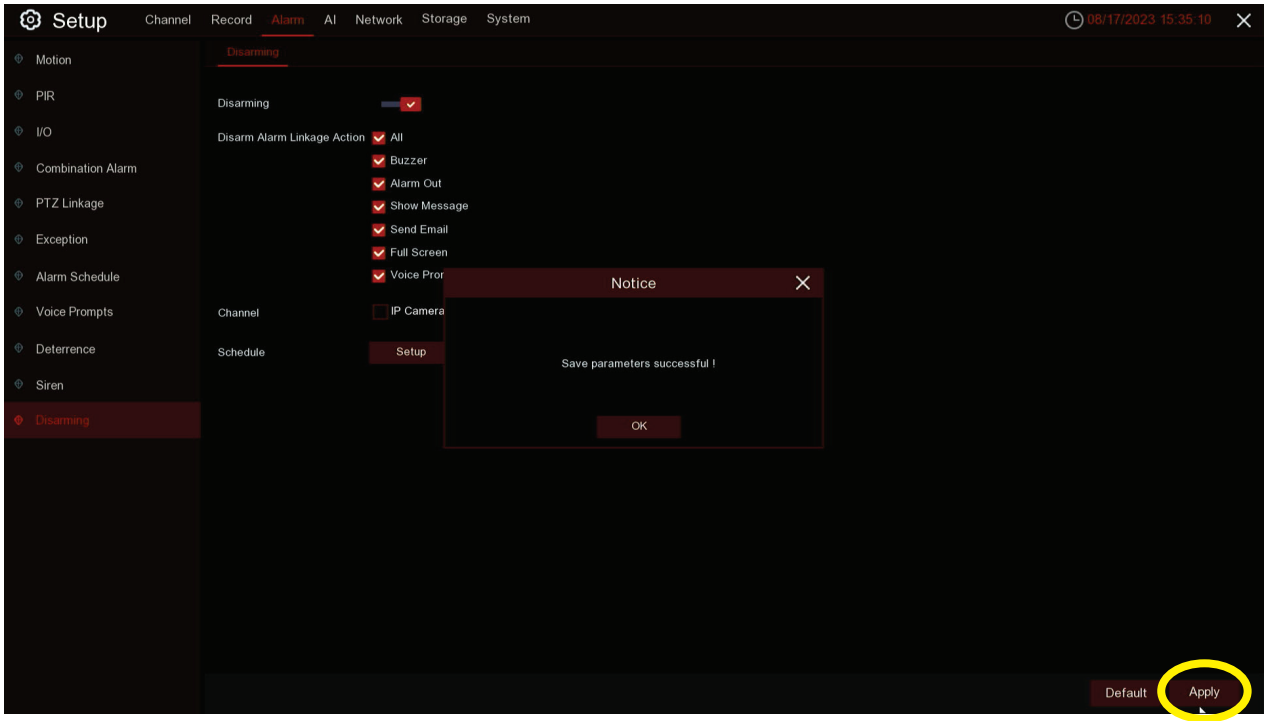


For APP


Step 1: Click the icon at the home page

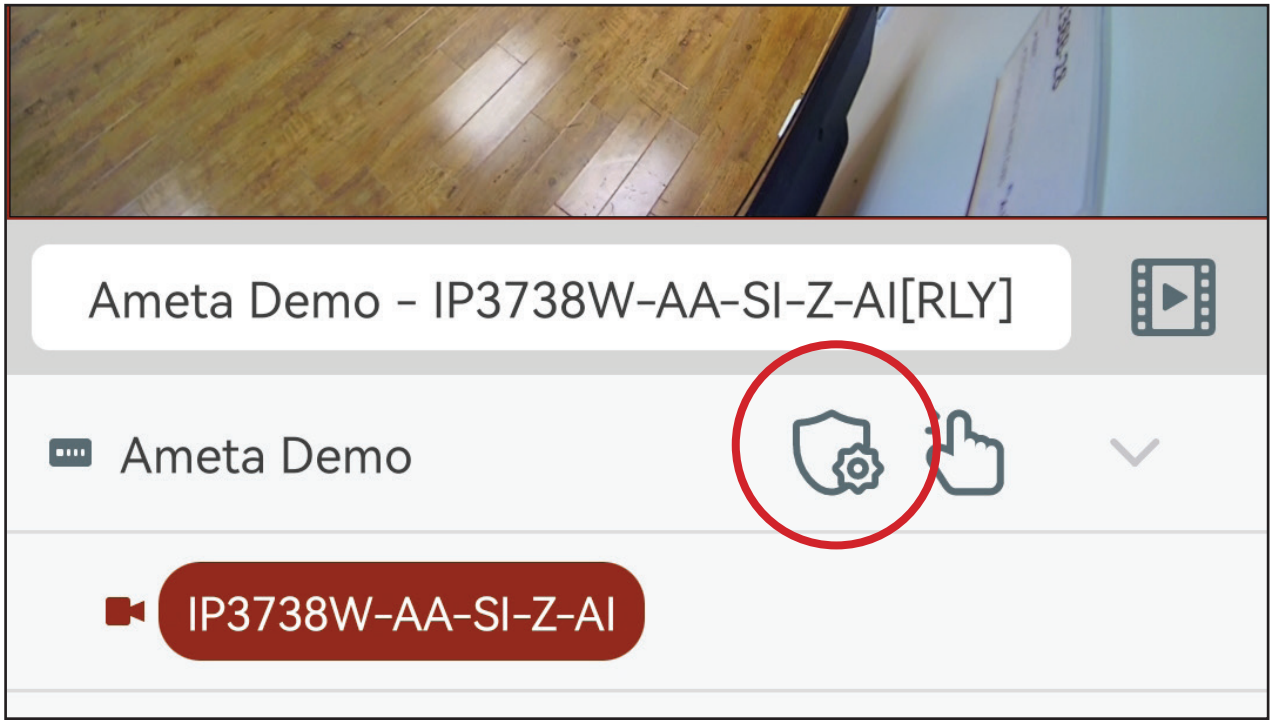


Step 2: Select camera channels you want for disarming

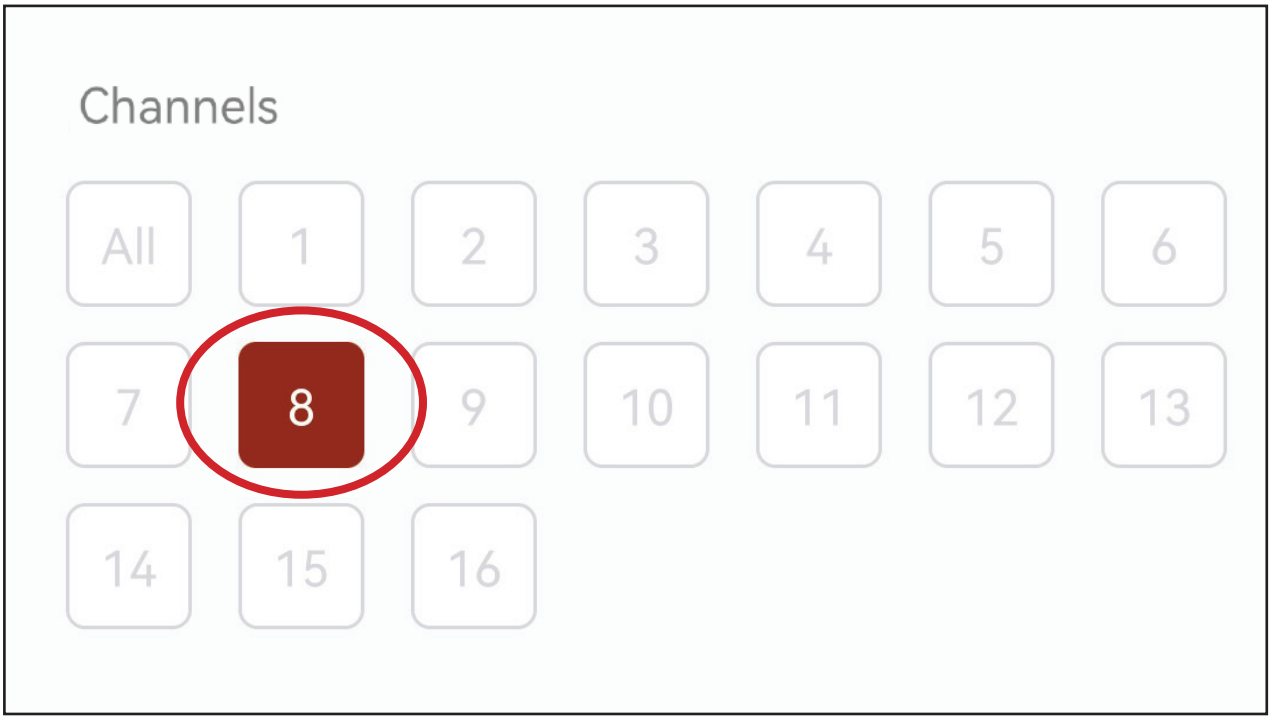

Step 3: Turn on the "Disarming" option to manually turn off siren & strobe light for ALL cameras selected

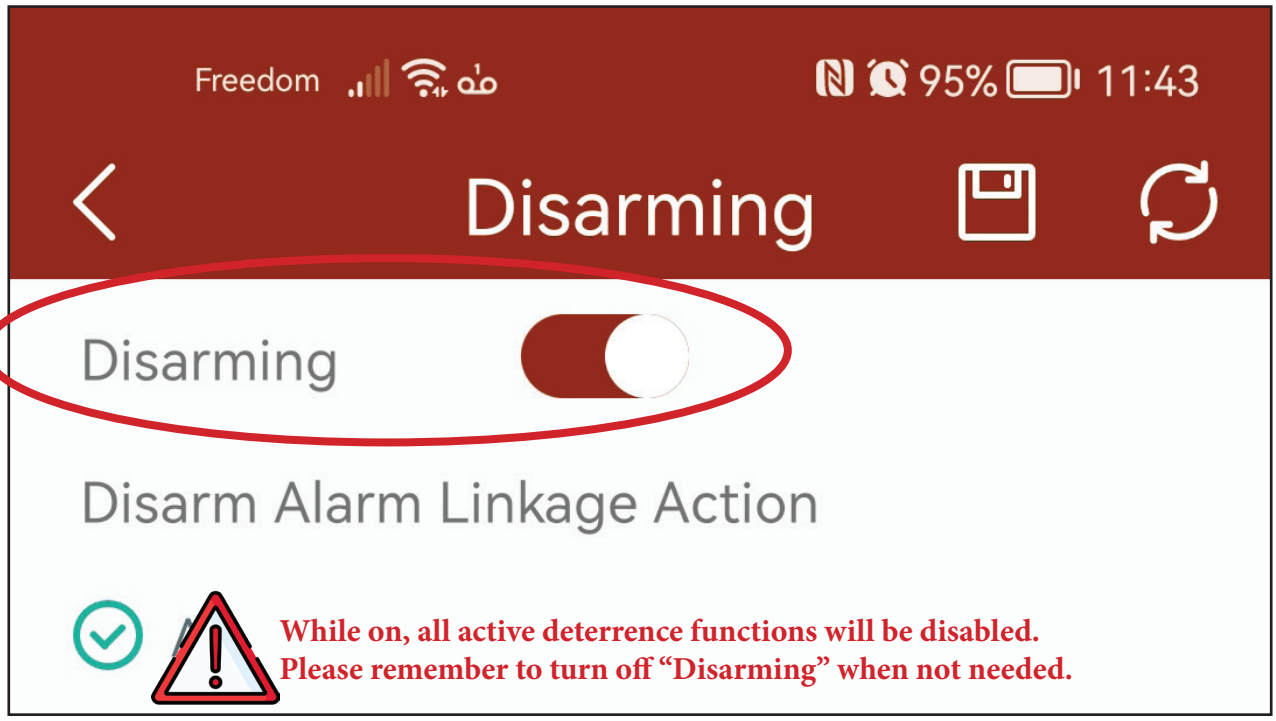


Step 6: Use the icon to save settings

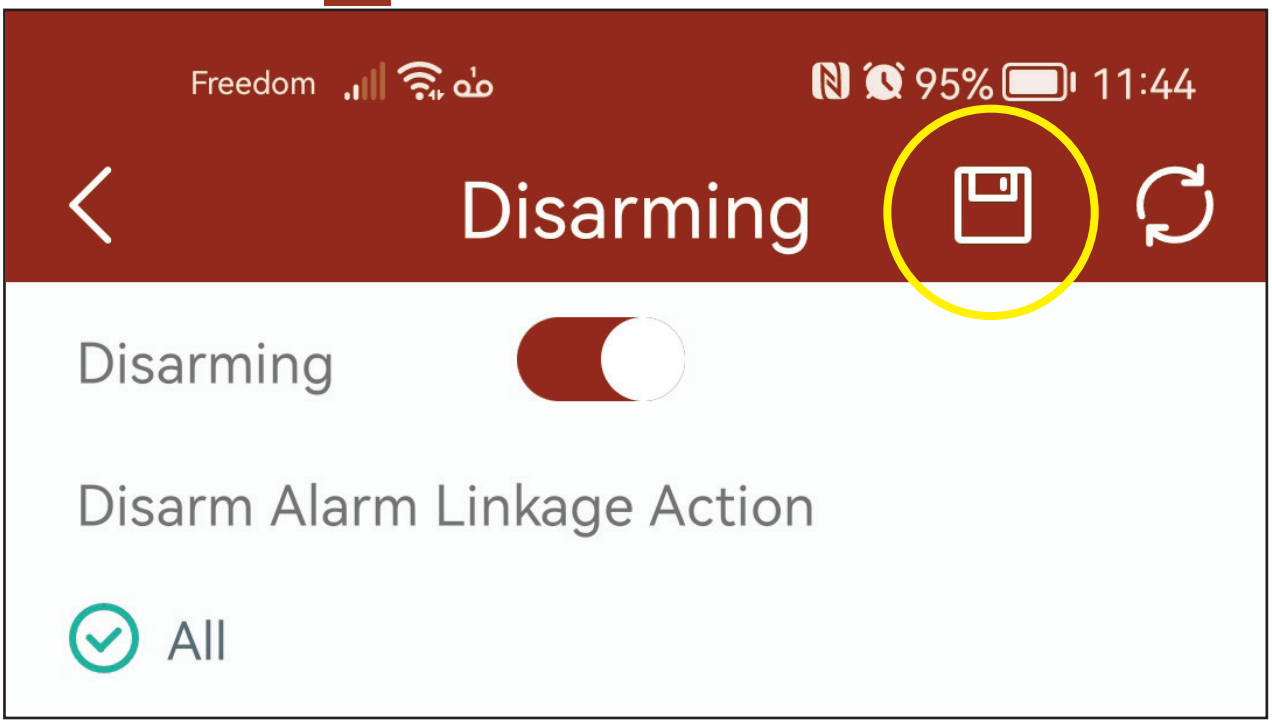


Part 5: How to manage APP notification


Step 1: Use the icon to access main menu

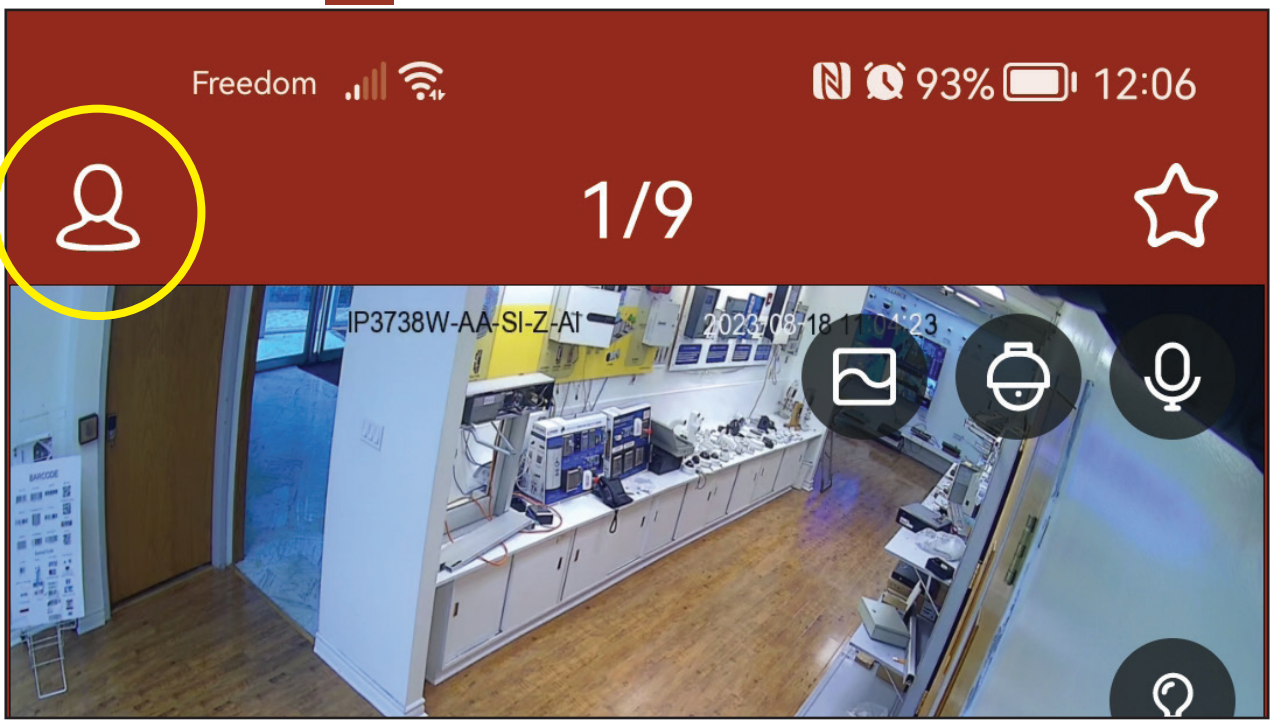


Step 2: Select "Notifications"

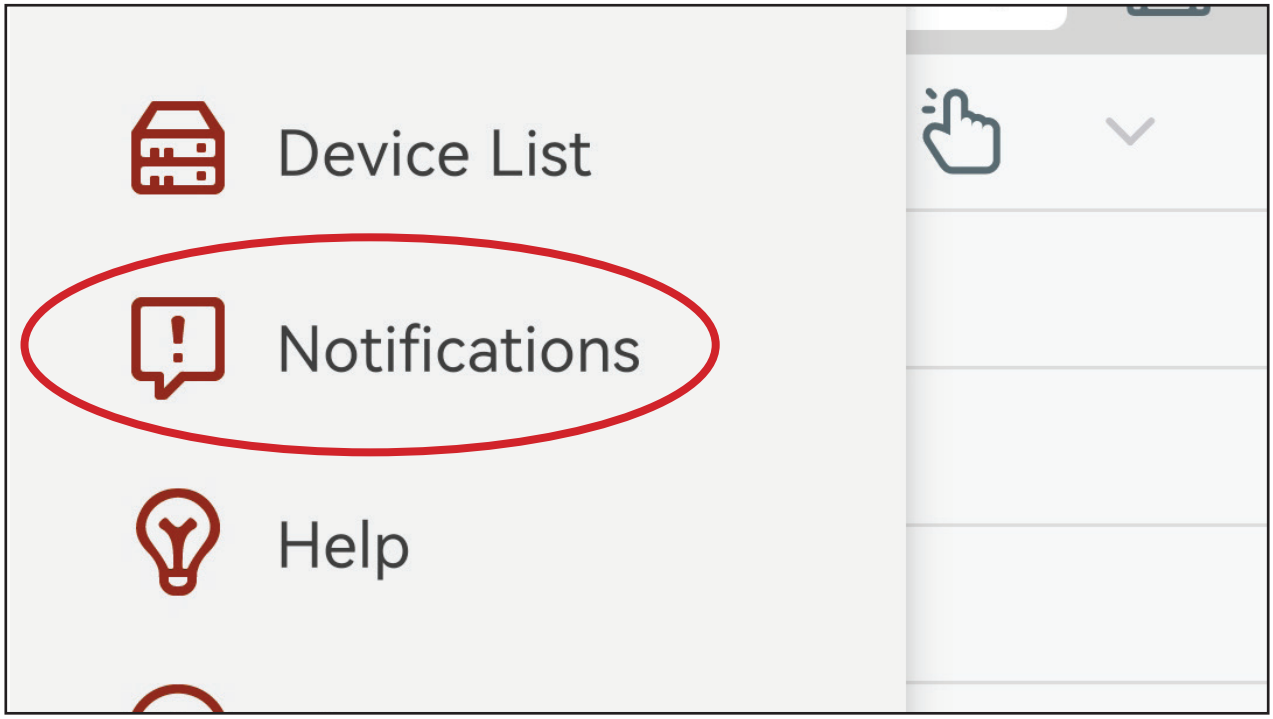


Step 3: Use icon to access push notification settings

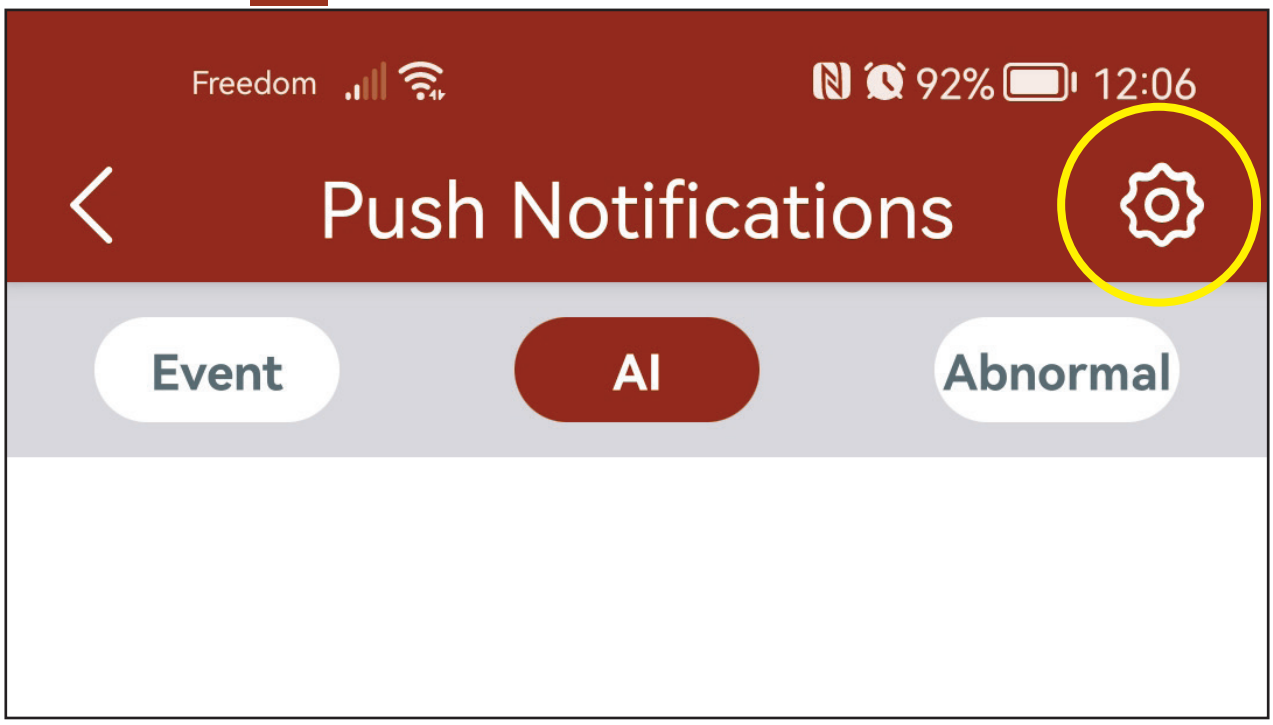


Step 4: Turn on "Push Setting" option for your device

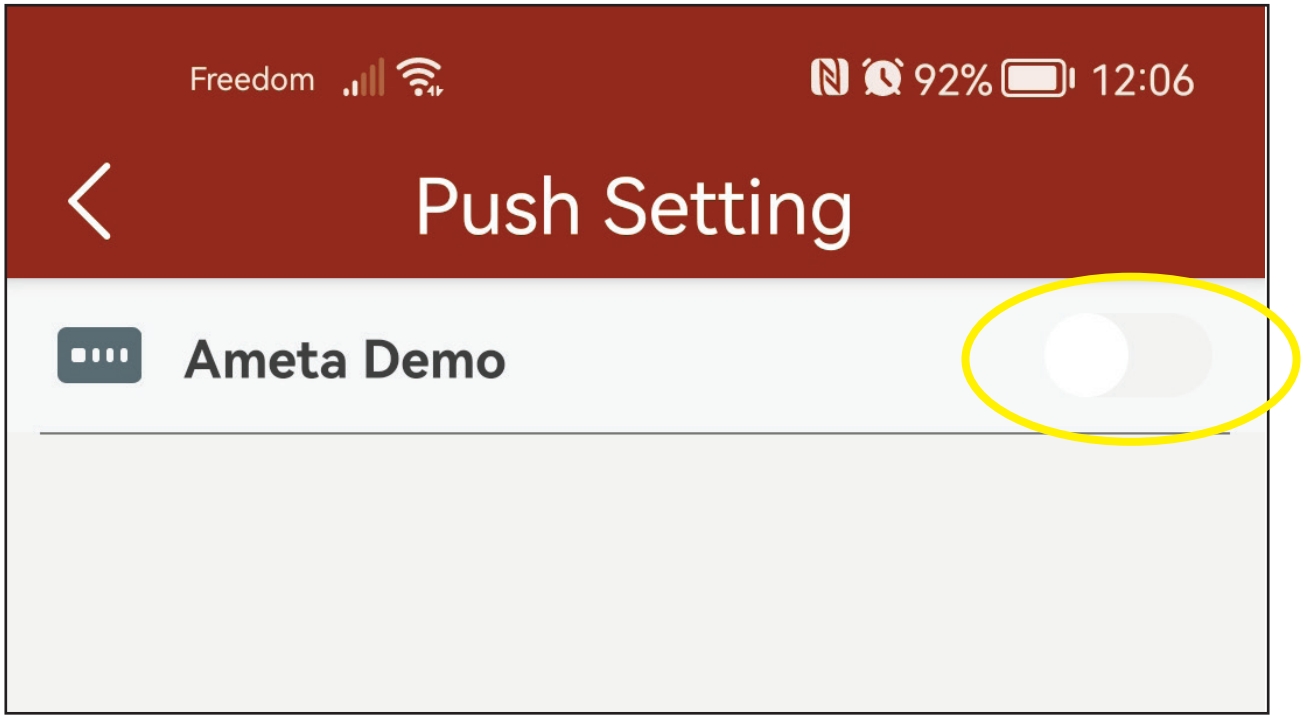


Step 5: Use icon to access camera push settings

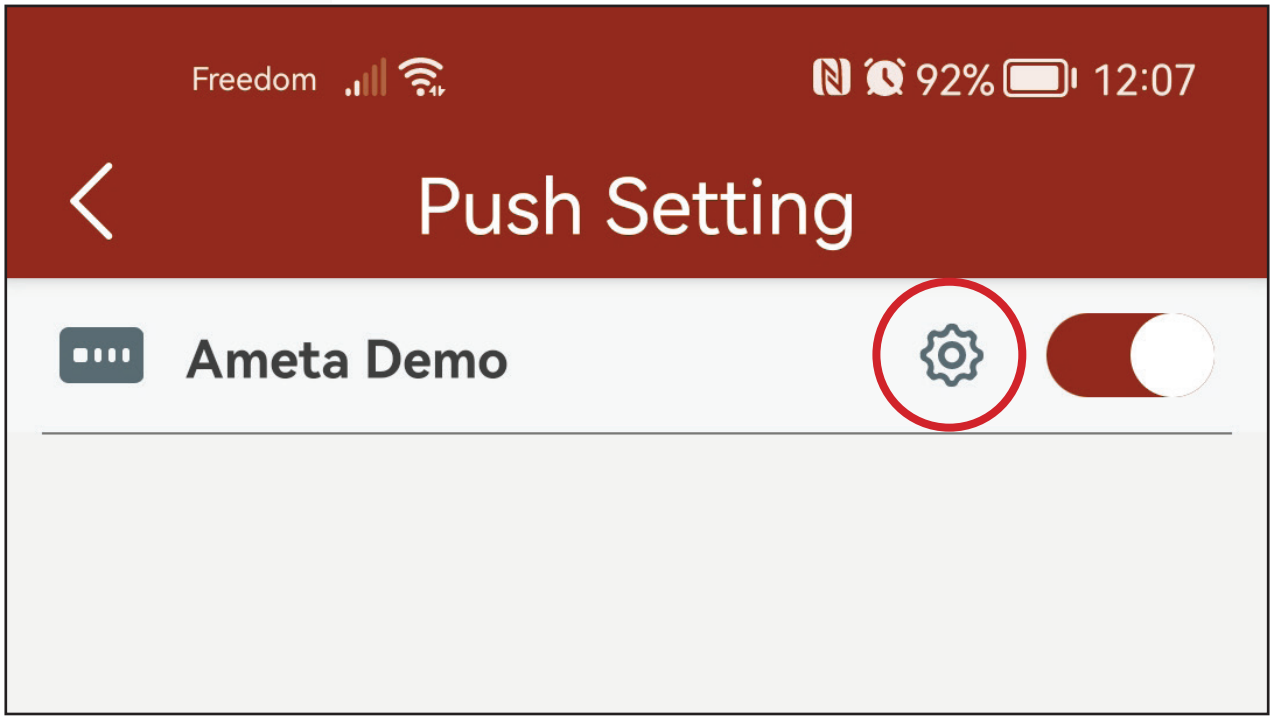


Step 6: Turn off “Motion Detection” & “PIR Alarm” to avoid excessive notification

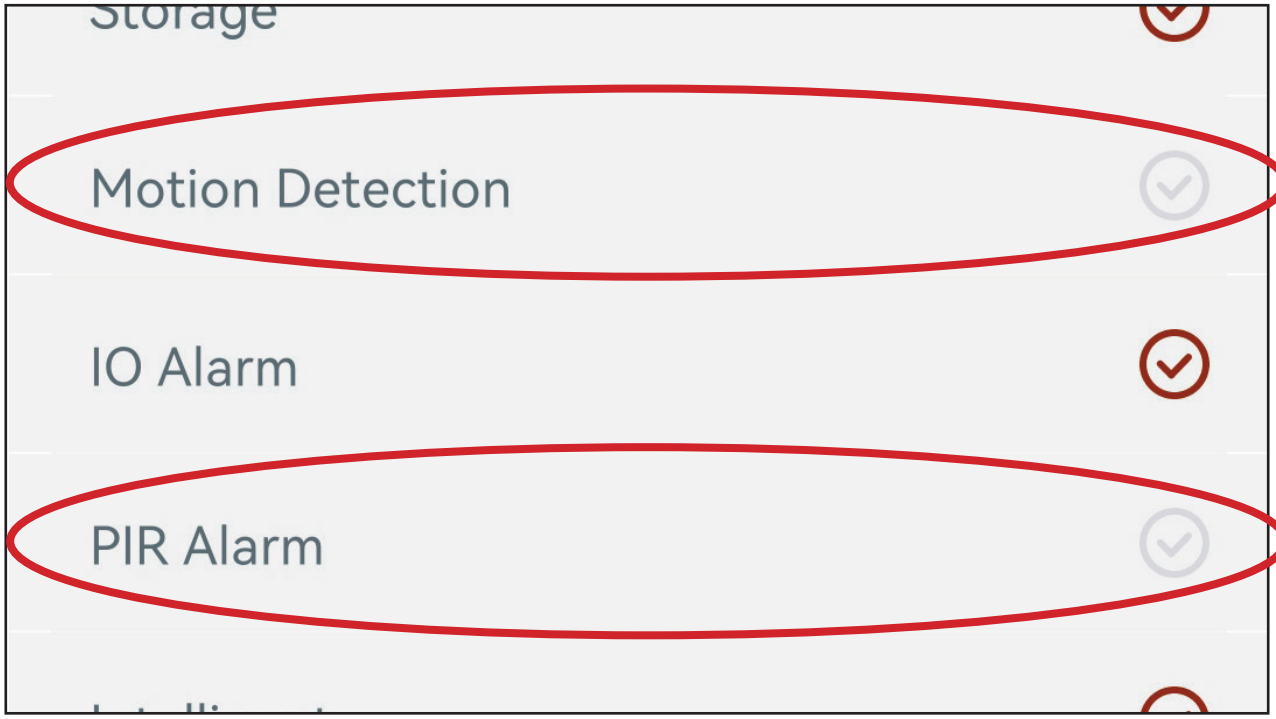


Step 7: You can manage individual camera push settings by expanding subsciption options

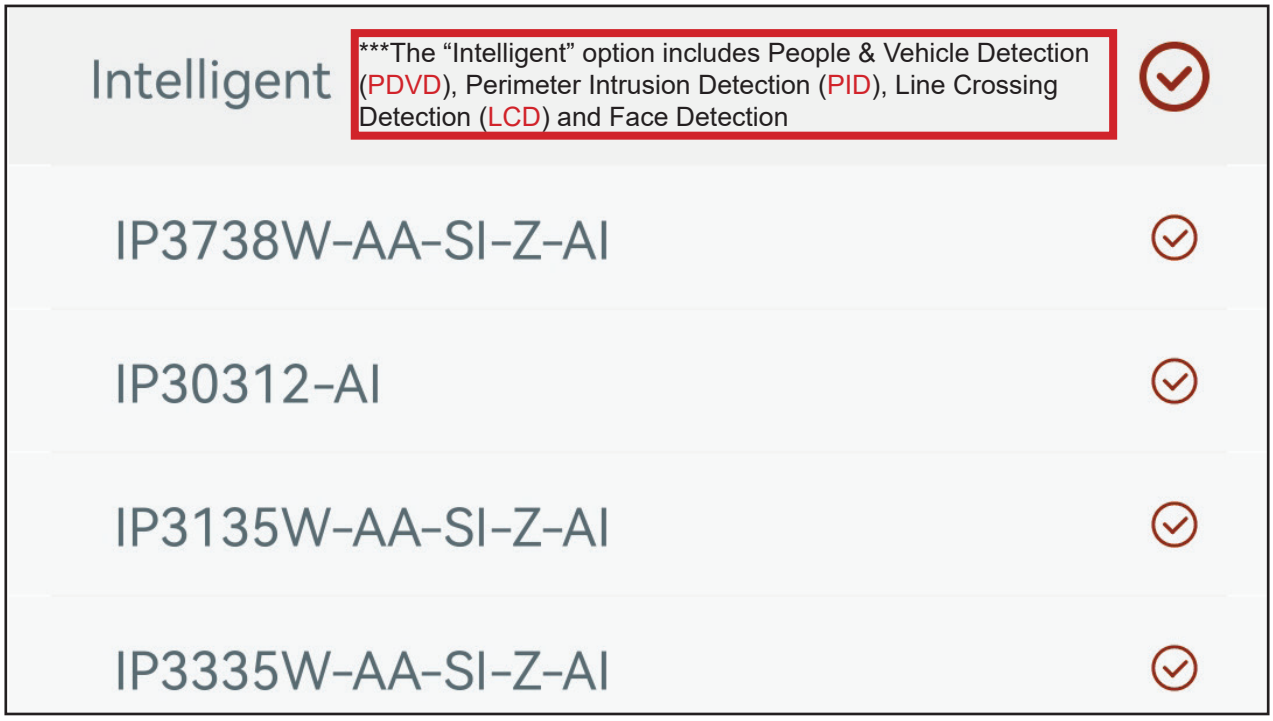


Final Step: Use “Save” to save settings

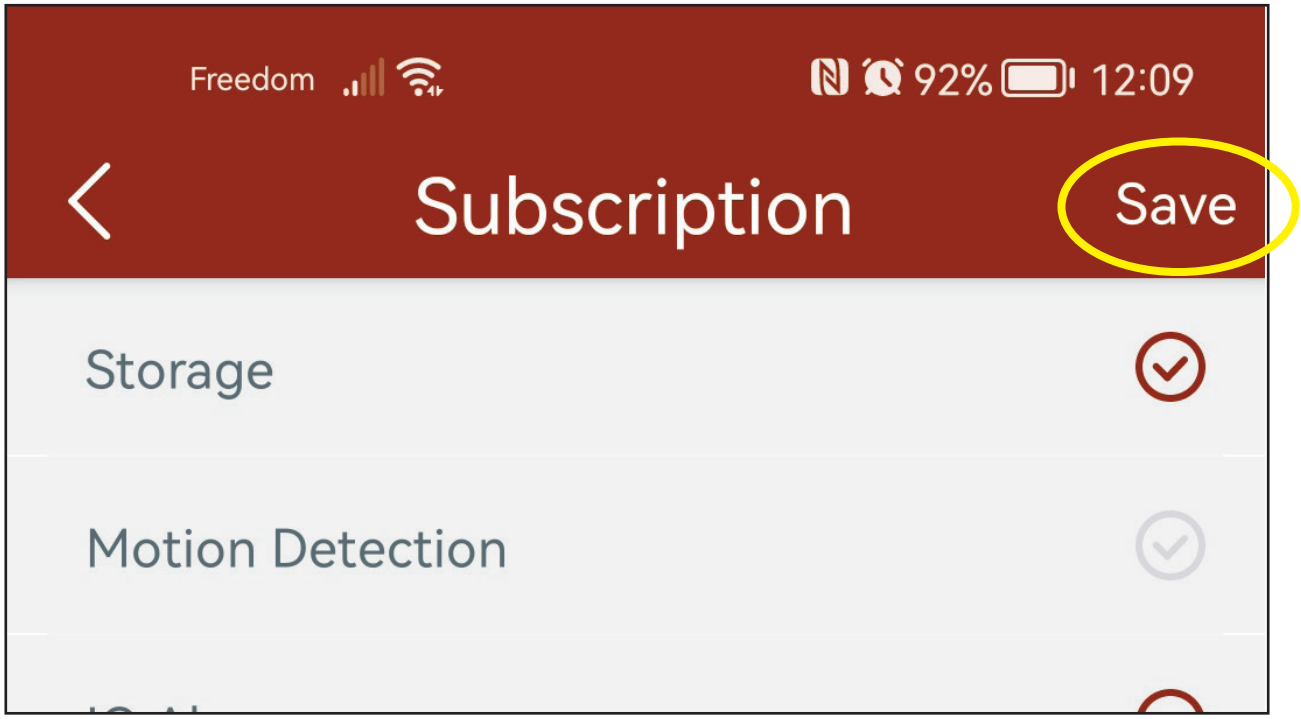

You can use phone notifications to enter the APP Push Notification page directly

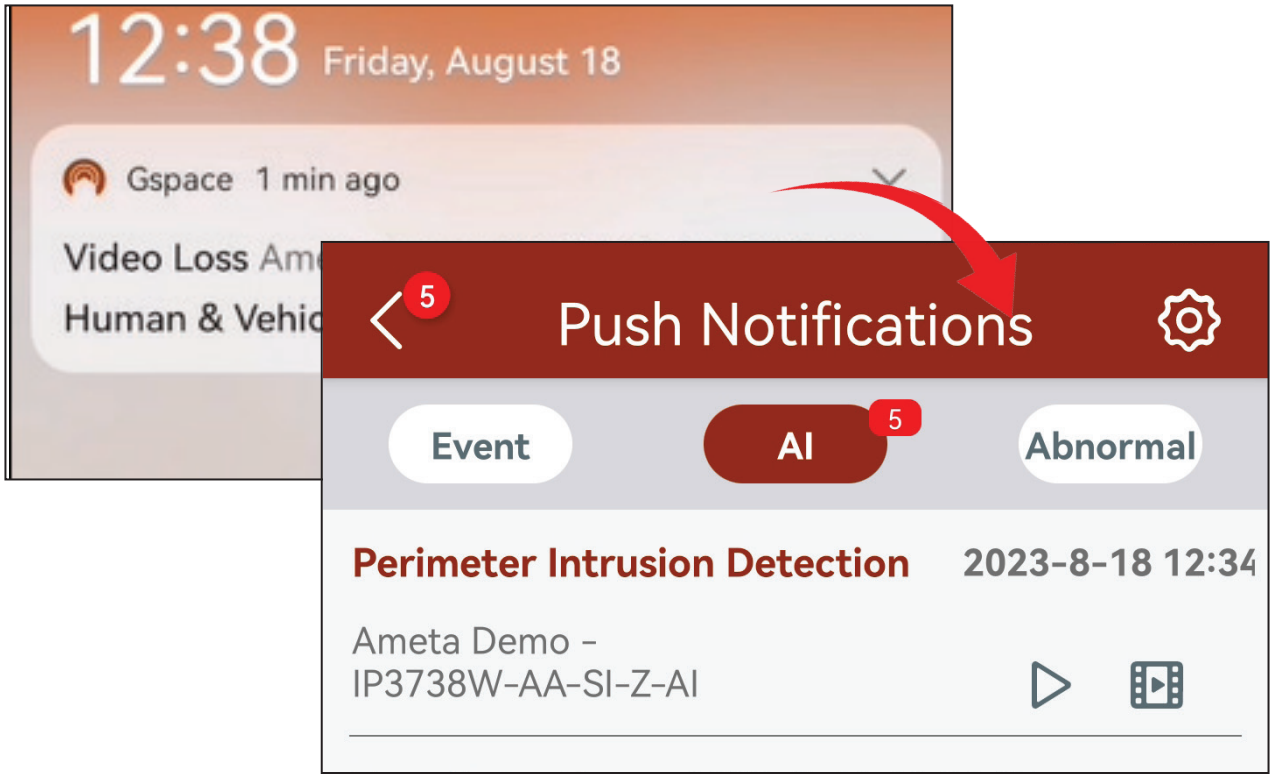

When receiving notifications, you can use icon to view event playback

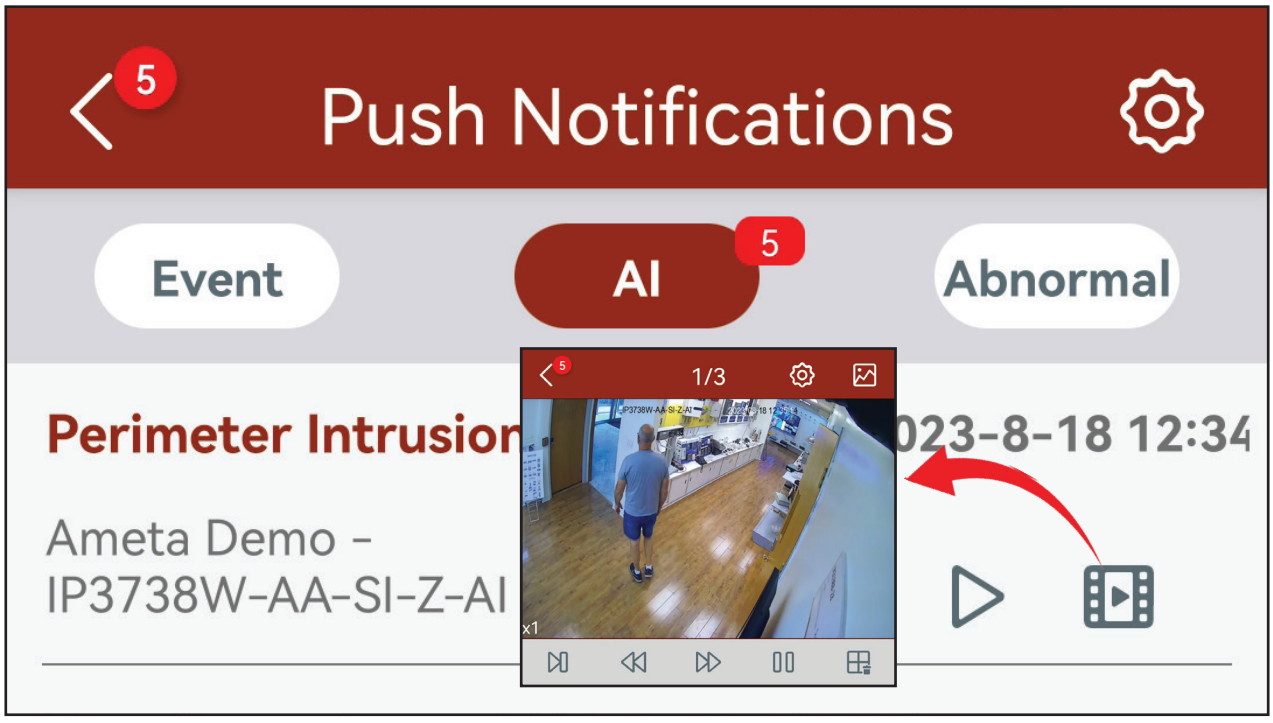


Part 6: How to manually turn on strobe light & siren via APP


Step 1: Use  icon to manually turn on Siren



Step 2: Choose "OK"

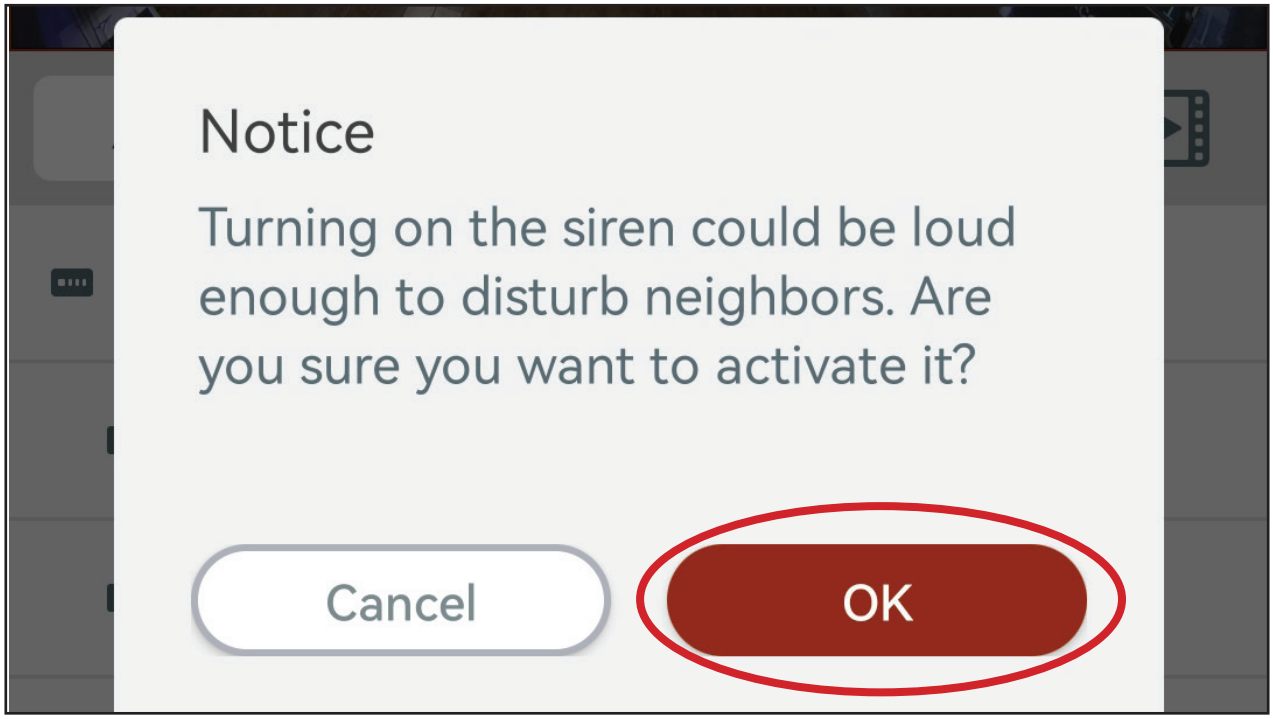

Step 3: Use  icon to manually turn on Strobe Light

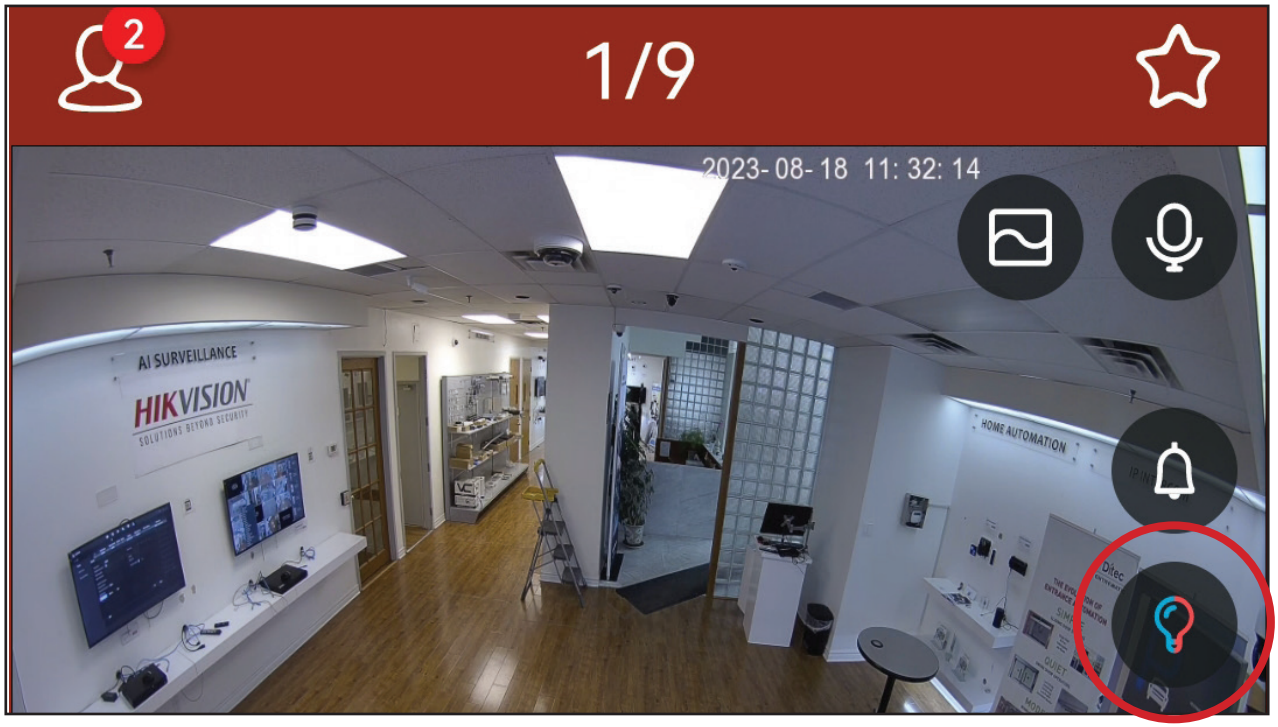


Step 4: When  icon changes to  icon, the strobe light is on




Part 7: How to manage APP alarm push schedule


Step 1: Select "Remote Setting" at the home page

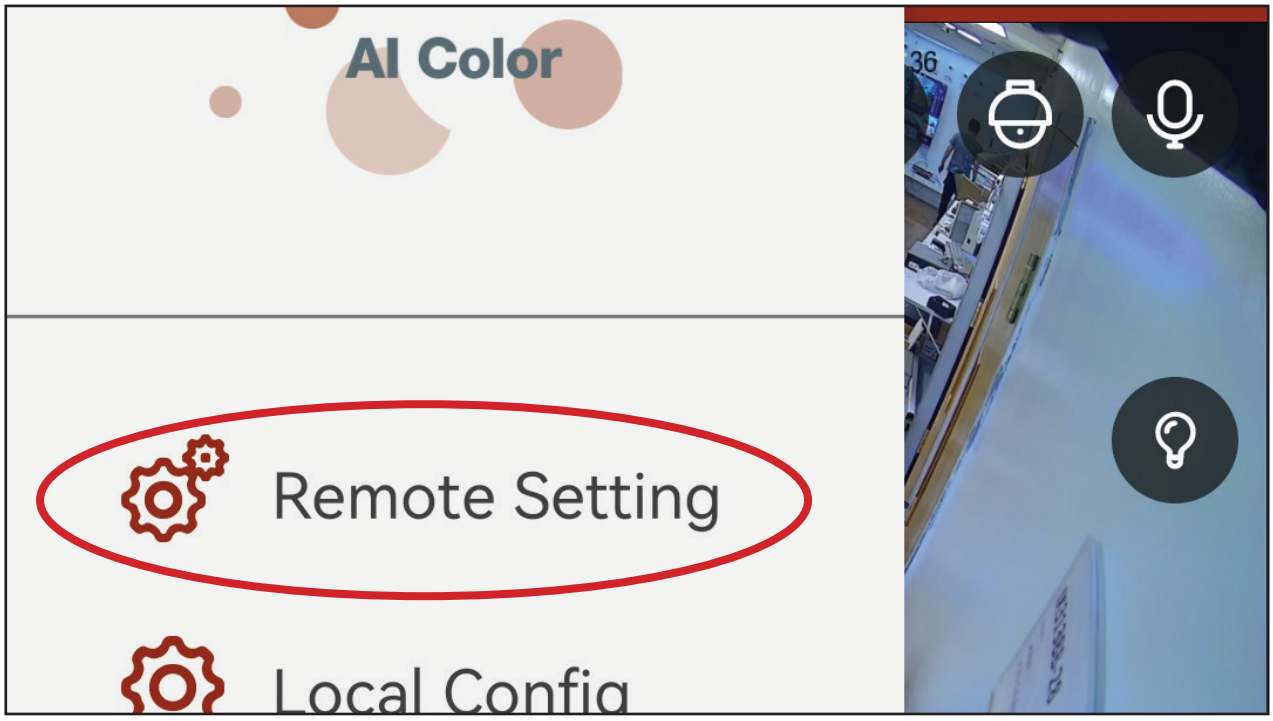


Step 2: Select your device

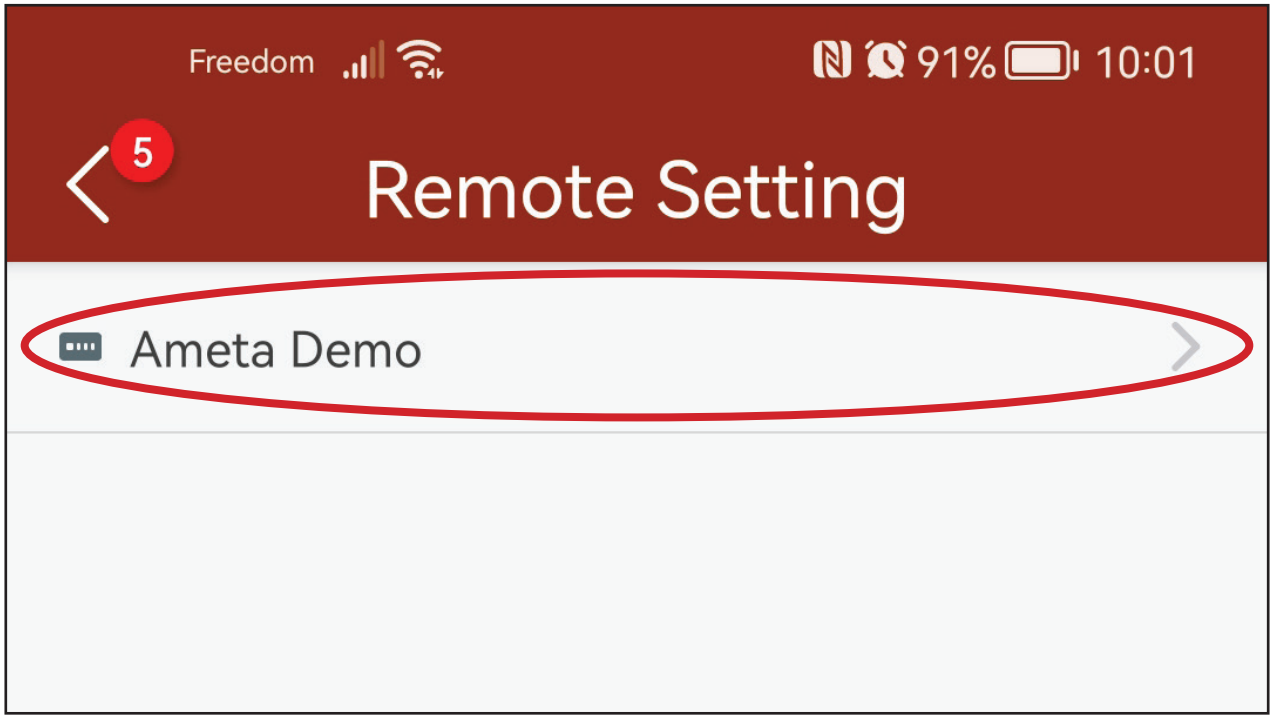


Step 3: Select "Alarm"

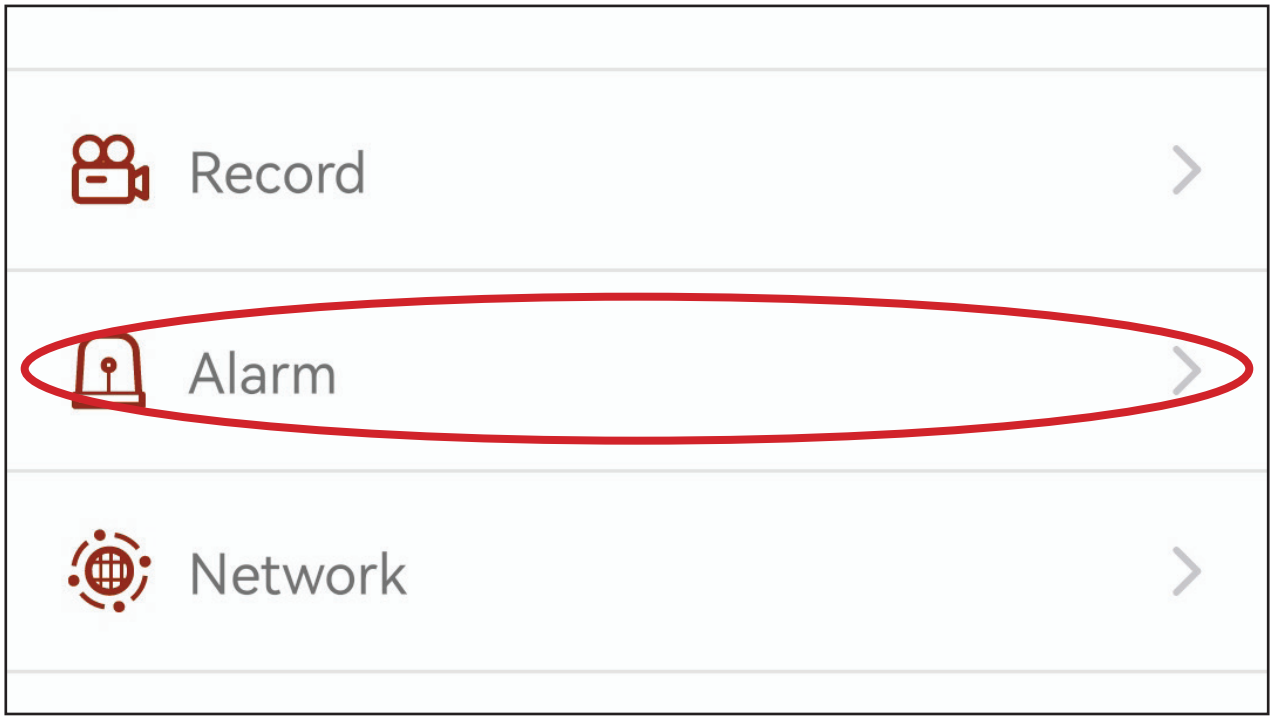

Step 4: Select "Alarm Schedule"

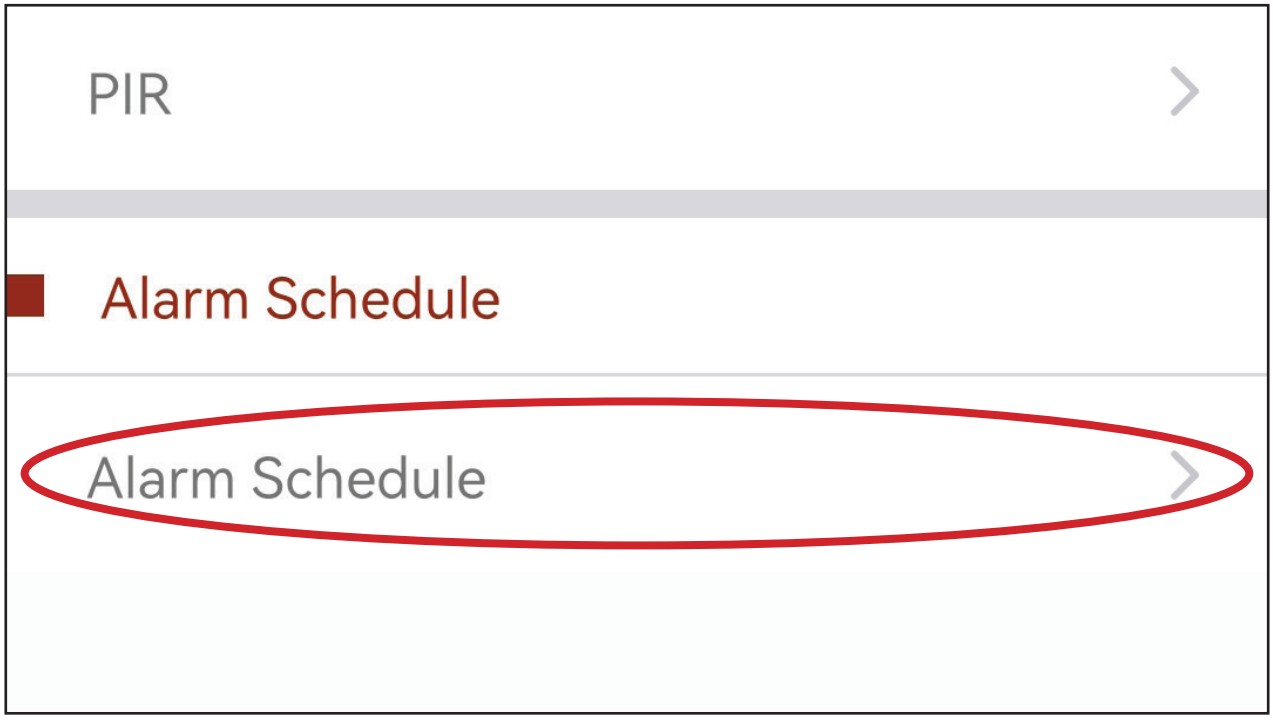

Step 5: Select the channel you need, and choose “Push” option

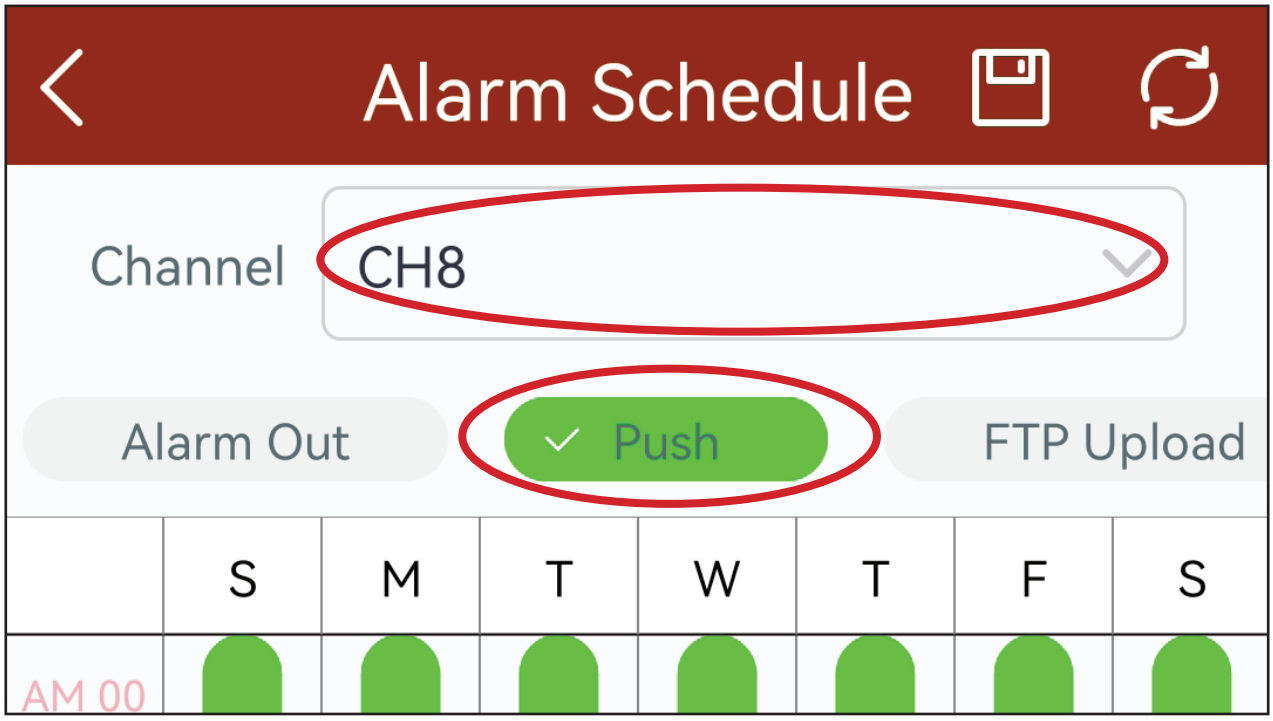

Step 6: Set the time period you need, and save using

